



LCD Monitor

ENGLISH

ProLite XUB2792HSN ProLite XUB2792HSC

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read this comprehensive manual carefully before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.

iiyama | Servicecard





Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

To report a fault, please contact your local support centre found at https://iiyama.com

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:


model number *

- purchase receipt and serial number *
- name and address for collection
- telephone/fax number, for availability during the day
- convenient collection date (date, time)
- short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.


If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

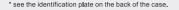

https://iiyama.com





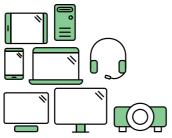

Say hello to a more sustainable product

IT products are associated with a wide range of sustainability risks throughout their life cycle. Human rights violations are common in the factories. Harmful substances are used both in products and their manufacture. Products can often have a short lifespan because of poor ergonomics, low quality and when they are not able to be repaired or upgraded.

This product is a better choice. It meets all the criteria in TCO Certified, the world's most comprehensive sustainability certification for IT products. Thank you for making a responsible product choice, that help drive progress towards a more sustainable future!

Criteria in TCO Certified have a life-cycle perspective and balance environmental and social responsibility. Conformity is verified by independent and approved verifiers that specialize in IT products, social responsibility or other sustainability issues. Verification is done both before and after the certificate is issued, covering the entire validity period. The process also includes ensuring that corrective actions are implemented in all cases of factory non-conformities. And last but not least, to make sure that the certification and independent verification is accurate, both TCO Certified and the verifiers are reviewed regularly.

Want to know more?

Read information about TCO Certified, full criteria documents, news and updates at **tcocertified.com.** On the website you'll also find our Product Finder, which presents a complete, searchable listing of certified products.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Wijkermeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PL2792HC

We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: https://iiyama.com

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
- Eprel registration number XUB2792HSN-B5 H : 1443451, XUB2792HSC-B5 H : 1443463

TABLE OF CONTENTS

FOR YOUR SAFETY	1
SAFETY PRECAUTIONS	1
SPECIAL NOTES ON LCD MONITORS	3
CUSTOMER SERVICE	3
CLEANING	3
BEFORE YOU OPERATE THE MONITOR	4
FEATURES	4
CHECKING THE CONTENTS OF THE PACKAGE	4
USING ARM OR STAND	5
FITTING AND REMOVAL OF STAND	7
CONTROLS AND CONNECTORS	8
CONNECTING YOUR MONITOR	9
DISCONNECTING YOUR MONITOR	11
COMPUTER SETTING	11
ADJUSTING THE HEIGHT AND THE VIEWING ANGLE	11
OPERATING THE MONITOR	12
ADJUSTMENT MENU CONTENTS	13
STANDBY FEATURE	22
TROUBLE SHOOTING	23
RECYCLING INFORMATION	
APPENDIX	25
SPECIFICATIONS : ProLite XUB2792HSN-B5 H	25
SPECIFICATIONS : ProLite XUB2792HSC-B5 H	26
DIMENSIONS	27
COMPLIANT TIMING	27

ENGLISH

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10cm (or 4 inches) from any walls.

When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

- Be careful not to hurt your fingers or hands when you change the height or the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

REMARK FOR WALL MOUNTING

This product is not designed for digital signage (electronic signboard) applications such as wall mounting.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

ENGLISH

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

- **NOTE** When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
 - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
 - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE

NOTE If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

- **WARNING** If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.
- **CAUTION** For safety reasons, turn off the power switch and unplug the monitor before you clean it.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner	Spray-type cleaner
Benzine	Wax
Abrasive cleaner	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.
- **CABINET** Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.
- **LCD** Periodic cleaning with a soft dry cloth is recommended.
- **SCREEN** Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- Supports Resolutions up to 1920 × 1080
- High Contrast 1000:1 (Typical), Adv. Contrast Function Available / Brightness 250cd/m² (Typical)
- Quick Response Time 4ms (Gray to Gray)
- Blue Light Reducer
- Digital Character Smoothing
- Automatic Set-up
- USB Type-C / RJ45 * / DP Out * Connectors
- USB Power Delivery supports up to 65W
- 2 × 2W Stereo Speakers
- Ergonomic Design TCO Certified
- Standby Feature
- VESA Mounting Standard (100mm×100mm) Compliant
- Keyhole for Security Lock

* ProLite XUB2792HSN only

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- Power Cable*
- Stand-Base with a screw
- Safety Guide
- HDMI Cable
- Stand-Neck
- Quick Start Guide
- USB Type-C Cable (C to C)
- Screwdriver
- **CAUTION** * The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.

An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.


USING ARM OR STAND

- **CAUTION** Before installation, make sure the display arm or desk arm stand is strong enough to hold the necessary weight of the monitor and the mount.
 - Panel angle adjustment range : 23° upward and 5° downward




< DISPLAY ARM OR DESK ARM STAND >

CAUTION When you use with the display arm or desk arm stand, in consideration of thickness of the mounting stage, tighten the M4 Screws (4pcs) which "L" length is 7mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

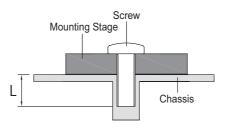

< ROTATING THE MONITOR >

The monitor is designed to be compatible with both landscape and portrait modes. Graphics card for portrait display will be required for rotating the image on the screen.

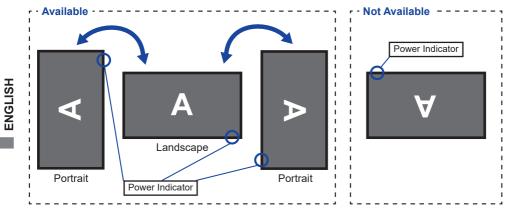

With Stand:

- **NOTE** Adjust the monitor's height before panel rotation.
 - Attempting to rotate the panel forcibly without adjusting the stand height may cause damage to the panel or the stand.


FITTING AND REMOVAL OF STAND

CAUTION


- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Install the Stand-Neck to the monitor and then tighten the 'thumb screw' with the provided screwdriver to secure them.

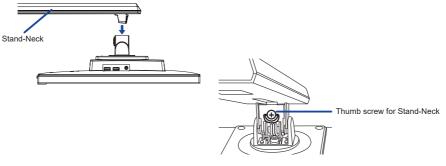

③ Install the Stand-Base to the Stand-Neck and then tighten the 'thumb screw' to secure them.

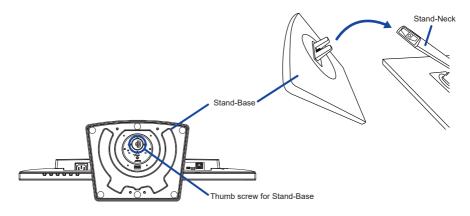

<Removal>

- Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- (2) Loosen the 'thumb screw' to remove the Stand-Base from the Stand-Neck.
- ③ Loosen the 'thumb screw' with the provided screwdriver to remove the Stand-Neck from the monitor.

CONTROLS AND CONNECTORS

<Front> <Back> 8 1004060 13 (14) (15) (16) Ť (18) (19) (1) Power Indicator NOTE Blue: Normal operation Orange: Standby Mode 2 Power Switch ((h)) (3) Menu / Select Button (ENTER) ④ Up / Volume Button (► / ◁) ⑤ Down / ECO Button (◀ / ∅) 6 Exit Button (EXIT) (7) Input Select Button (INPUT) 8 Speakers (9) Headphone Connector (()) (1) USB Downstream Connector (↔ (USB3.2 Gen 1: 5Gbps, 5V, 900mA) 1 USB Downstream Connector () (USB3.2 Gen 1: 5Gbps, 5V, 900mA)

- 12 Keyhole for Security Lock
 - **NOTE** You can fasten a security lock and cable to prevent the monitor from being removed without your permission.
- DisplayPort Out Connector (DP OUT) *^{1,2}
- (15) USB Type-C Connector (USB C) (USB3.2 Gen 1: 5Gbps, 20V, 3.25A)
- (6) DisplayPort Connector (DP)
- 1 HDMI Connector (HDMI)
- 18 Cable Hole

ENGLISH

- (19) AC Connector (\sim : Alternating current)
- *1 Only for ProLite XUB2792HSN
- *² DP OUT Connector has a black rubber cap already attached. Remove the cap before connection.

CONNECTING YOUR MONITOR


- ① Ensure that both the computer and the monitor are switched off.
- 2 Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the USB Type-C Cable when viewing images on your monitor through the USB Type-C Connector or when using the monitor's USB hub function.*
- ④ Connect the Power Cable to the monitor first and then to the power source.
- (5) Turn on your monitor and computer.
- * When charging connected device via USB Type-C Connector, check if the device is equipped with a USB Type-C Connector that supports charging function via USB PD (=Power Delivery).
 - The connected device can be charged via USB Type-C Connector even when the monitor is in standby mode. See page 17 for USB Battery Charge (USB BC) function.
 - The USB power delivery is up to 65W. If the connected device required more than 65W for operation or for boot up (when the battery is drained), use the original power adapter that came with the device.
 - If a separately purchased USB Type-C Cable is used, make sure the cable is certified by USB-IF and is full-featured with power delivery and video / audio / data transfer functions.
 - If the monitor is in standby mode, it will not display a picture automatically in the following situations:

1. First boot of the PC 2. When the PC is resuming from standby mode

To display a picture, press the INPUT Button. This is normal behaviour to minimize power consumption during standby mode. To prevent this behaviour, please access the OSD menu and set "USB BC" to "ON".


- USB C to A cable is not included with the monitor. If you use a USB C to A cable, please note that you can only transfer data.
- Compatibility with all connected devices is not guaranteed due to different user environments.
- Mote Sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
 The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
 - The Class I pluggable equipment Type A must be connected to protective earth.
 - The socket-outlet shall be installed near the equipment and shall be easily accessible.
 - Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection]

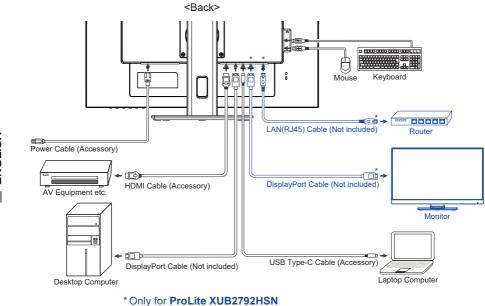

[Collect Cables]

 Put the cables through the cable hole to bundle them.



DISCONNECTING YOUR MONITOR

- ① Ensure that both the computer and the monitor are switched off.
- ② Disconnect the power source first and then the Power Cable from the monitor.
- ③ Disconnect the USB Type-C cable from the computer and the monitor.
- ④ Disconnect the signal cable from the computer and the monitor.

COMPUTER SETTING


Signal Timing

Change to the desired signal timing listed on page 27: COMPLIANT TIMING.

ADJUSTING THE HEIGHT AND THE VIEWING ANGLE

- For optimal viewing it is recommended to position yourself directly opposite to the full face of the monitor, then adjust the monitor's height and angle to your own preference.
- Hold the panel so that the monitor does not topple when you change the monitor's height or angle.
- You are able to adjust the monitor's height up to 150mm, angle up to 45° right and left, 23° upward and 5° downward.
- NOTE Do not touch the LCD screen when you change the height or the angle. It may cause damage or break the LCD screen.
 - Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the height or the angle.
 - Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.



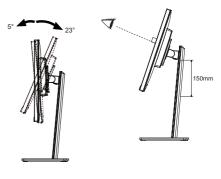




OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 27. You are also able to adjust the picture by following the button operation shown below.

 
 Press the ENTER Button to start the On Screen Display feature. There are additional Menu items which can be switched by using the ◀ / ▶ Buttons.



- ② Select the Menu item which contains the adjustment icon relating to the adjustment you want to make. Press the ENTER Button. Then, use the ◀ / ▶ Buttons to highlight the desired adjustment icon.
- ③ Press the ENTER Button again. Use the ◀ / ► Buttons to make the appropriate adjustment or setting.
- ④ Press the EXIT Button to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for OSD vertical position, select "OSD" of Menu item and then press the ENTER Button. Then, select "OSD Vertical Position" by using the \blacktriangleleft / \blacktriangleright Buttons. An adjustment page appears after you press the ENTER Button.

Then, use the \triangleleft / \triangleright Buttons to change the OSD vertical position settings. The OSD vertical position should be changing accordingly while you are doing this.

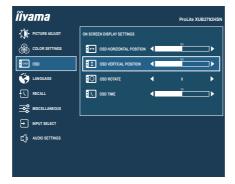

Press the EXIT Button lastly and all changes are saved in the memory.

NOTE

- When button operations are aborted during adjustment, On-Screen Display disappears when the time set for the OSD Time has passed. Also, press the EXIT button to quickly turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- All adjustments have only one setting which applies to all signal timings.

ADJUSTMENT MENU CONTENTS

	Yamaa anomesa order status anomesa order status anomesa order status anomesa order status anomesa anomesa anomesa	Ludir Radical 4 march > Comut	
Adjustment Item	Problem	n / Option Button to Press	
Brightness * ^{2,3,4}	Too dark Too bright	\$ \$ \$	
Contrast *3	Too dull Too intense		
	Off	Normal	
ECO * ³ Direct	Mode 1	Brightness of back-light is reduced.	
	Mode 2	Brightness of back-light is reduced more than Mode1.	
	Mode 3	Brightness of back-light is reduced more than Mode2.	
	Off	Typical	
Blue Light Reducer	Mode 1	Blue light is reduced.	
	Mode 2	Blue light is reduced more than Mode1.	
	Mode 3	Blue light is reduced more than Mode2.	
Adv. Contrast *4	On	Increased Contrast Ratio	
Auv. Contrast	Off Typical Contrast Ratio		
Overdrive	Off / 1 / 2 / 3 It will improve the gray level response time of the LCD panel.		

*¹ Picture Adjust is disabled when i-Style Color is activated.

*² Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

*³ Brightness, Contrast and ECO adjustments are disabled when Adv. Contrast is activated.

*⁴ Brightness and Adv. Contrast adjustment are disabled when ECO is activated.

Direct

You can skip the Menu items and directly display an option settting screen by using the following button operations.

• ECO : Press the \mathcal{P} Button when the Menu is not displayed.

Color Settings		ProLiz XU272000 TREEXINGE REAT REAT REAL RE
Adjustment Item	Probler	m / Option Button to Press
	9300K	Cool color
Color Temperature *1	7500K	Normal color
	6500K	Warm color
	Red	
User Preset *1	Green	Too weak Too strong
	Blue	
	Off	Return to a state set by color adjustment except i-Style Color.
	Standard	For general windows environment and monitor default setting.
i-Style Color *2 Direct	Game	For PC game environment.
	Cinema	For movie and video environment.
	Scenery	For displaying outdoor scenery images
	Text	For text editing and viewing in a word processing environment.

*¹ Color Temperature and User Preset settings are disabled when i-Style Color or Blue Light Reducer is activated.

*² i-Style Color adjustment is disabled when Blue Light Reducer is activated.

Direct

ENGLISH

You can skip the Menu items and directly display an option setting screen by using the following button operations.

• i-Style Color : Press the EXIT Button when the Menu is not displayed.

OSD	If years Polla SUBSTORIA If years If years If years If years		
Adjustment Item	Problem / Option Button to Press		
OSD Horizontal Position	OSD is too left ← ► OSD is too right ← ◀		
OSD Vertical Position	OSD is too low OSD is too high		
OSD Rotate	Rotate the OSD. 0° (Normal) / +90° (Rotate right) / -90° (Rotate left)		
OSD Time	You can set the OSD display duration time between 5 and 30 seconds.		

S Language		ESPAÑOL B411		
Adjustment Item		Opt	tion	
	English	English	Español	Spanish
	Français	French	Nederlands	Dutch
Language	Deutsch	German	Ĉesky	Czech
	Italiano	Italian	Русский	Russian
	Polski	Polish	日本語	Japanese

	Wrama Predik NJE275000	
Adjustment Item	Option	
Recall	Factory-preset data is restored.	

Sellaneous Miscellaneous	Norma Image: State of the state of th	04 AGAUST	
Adjustment Item	Problem /	Option	Button to Press
Sharp and Soft	1 2 3 4 5 6 You can change the picture quality from 1 to 6 (sharp to soft). Press the ▶ Button to change the picture quality in numerical order. Press the ◀ Button to change the picture quality in reverse numerical order.		
Video Mode Adjust	Full	Full screen displ	lay
Video Mode Aujust	Aspect *1	Expansion displ	ay of Aspect
Opening Logo	On	iiyama Logo is displayed when the monito turned on.	
	Off	iiyama Logo is n is turned on.	not displayed when the monitor
	On	USB devices can be charged even when the monitor is in the standby mode.	
USB BC	Off	USB devices ca monitor is in the	n not be charged when the standby mode.
NOTE When the monitor is turned off, USB devices cannot be charged even when the USB BC function is on. While this function is off, USB devices do not operate even when the monitor is in standby mode to save standby electricity. When operating USB devices, turn this function on.			
MST * ^{2,3,4}	On	Video signal from multiple monitor	m computer can be extended on s.
	Off	Video signal from other monitor.	m computer is duplicated on the
	Displays information regarding the current input signal coming		
Display Information	NOTE See		omputer. d user guide for more information solution and refresh.

ENGLISH

- *¹ Option is unavailable with 16:9 resolution.
- *² Available for DisplayPort or USB Type-C input only.
- *³ On/Off of the MST function is not dependent on input signal switching.
- *⁴ Maximum monitor quantity that can be connected in a daisy chain using DP OUT connector Video format : 1920 × 1080 @60Hz

Input source	MST : On Extension mode	MST : Off Clone mode
USB Type-C	2	4
DisplayPort	4	4

Total number of monitors including the first one connected directly to the computer Connected monitor quantity may differ depending on the specification of the computer used.

Input Select	Nyama N	ANT BOARS ANTO NANGE Control (197) Control (197	Podda XUB273050
Adjustment Item	Option		
	Auto * Search for an available input source and select automatically.		
Input Source	Manual	HDMI	Select the Digital (HDMI) input.
		DisplayPort	Select the Digital (DisplayPort) input.
		USB C	Select the Digital (USB Type-C) input.
NOTE If "Auto" is selected, only one source available is selected automatically. Signal switching is not possible if the computer to which the signal you want to select is connected is in standby mode. Input source is fixed and it will not be detected automatically when you select HDMI, DisplayPort or USB Type-C manually.			

* Unavailable when MST is activated.

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

• Input Select : Press the INPUT Button when the Menu is not displayed.

Audio Settings iivama ProLite XUB PICTURE ADJUST VOLUME \$ C N . 👓 OSD 🚱 LANGUAGE OFF NPUT SELECT ALDIO SETTINGS Adjustment Item Problem / Option Button to Press Too soft Volume Direct Too loud On Turn off the sound temporarily. Mute Audio Off Return the sound volume to the previous level. NOTE Press the
√ (►) Button to display the volume adjustment bar and switch On and Off the Mute function by pressing the \triangleleft / \triangleright Buttons.

Direct

You can skip the Menu items and directly display an adjustment scale by using the following button operations.

• Volume : Press the 📢 Button when the Menu is not displayed.

ENGLISH

Lock Mode

<OSD Menu>

The OSD can be locked to avoid an accidental setting change.

- 1. Make sure the monitor is turned ON.
- The OSD lock will be activated by pressing the front ENTER Button for about 10 seconds. If you try to access the OSD by pressing any of the buttons, a message "OSD Locked" will appear on the screen.
- 3. The OSD lock will be deactivated by pressing the front ENTER Button again for about 10 seconds.

<Power Switch>

The Power Switch can be locked to avoid an accidental power operation.

- 1. Make sure the monitor is turned ON.
- The Power Switch lock will be activated by pressing the front ◀ Button for about 10 seconds. If you try to turn off the monitor by pressing the Power Switch, a message "Power Button Locked" will appear on the screen.
- 3. The Power Switch lock will be deactivated by pressing the front ◀ Button again for about 10 seconds.


STANDBY FEATURE

This product features the standby function. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to 0.5W or less*. The screen becomes dark, and the power indicator turns to orange. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

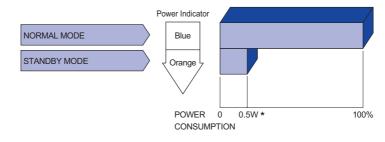

* When the USB devices are not connected.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

- 1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
- Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
- If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Problem

Check

(1) The picture does	
not appear.	
(Power indicator	□ The Po
deee not light up)	

.

	(Power indicator does not light up.)	 The Power Cable is firmly seated in the socket. The Power Switch is turned ON. The AC socket is live. Please check with another piece of equipment.
	(Power indicator is blue.)	 If the blank screen saver is in active mode, touch the keyboard or the mouse. Increase the Contrast and/or Brightness. The computer is ON. The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
	(Power indicator is orange.)	 If the monitor is in standby mode, touch the keyboard or the mouse. The computer is ON. The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
2	The screen is not synchronized.	The Signal Cable is properly connected.The signal timing of the computer is within the specification of the monitor.
3	The screen position is not in the center.	□ The signal timing of the computer is within the specification of the monitor.

 ④ The screen is too bright or too dark.
 □ The video output level of the computer is within the specification of the monitor.

Problem	Check
5 The screen is shaking.	 □ The power voltage is within the specification of the monitor. □ The signal timing of the computer is within the specification of the monitor.
6 No sound.	 The audio equipment (computer etc.) is ON. The audio visual cable is properly connected. The Volume is turned up. The Mute Audio is OFF. The audio output level of the audio equipment is within the specification of the monitor.
⑦ The sound is too loud or too quiet.	□ The audio output level of the audio equipment is within the specification of the monitor.
⑧ A strange noise is heard.	☐ The audio visual cable is properly connected.

ENGLISH

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor. Please visit our web site: https://iiyama.com for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : ProLite XUB2792HSN-B5 H

Size Category		27"		
	Panel technology	IPS (In-Plane-Switching)		
	Size	Diagonal: 27" (68.6cm)		
	Pixel pitch	0.311mm H × 0.311mm V		
LCD Panel	Brightness	250cd/m ² (Typical), 200cd/m ² (Default / Energy Saving)		
Fallel	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available		
	Viewable angle	Right / Left: 89 degrees each, Up / Down: 89 degrees each (Typical)		
	Response time	4ms (Gray to Gray)		
Display	Colors	Approx. 16.7M		
Sync Frequency		Horizontal: 30.0-85.0kHz, Vertical: 55-75Hz		
Native Resolution Support max. resolution		1920 × 1080, 2.1 MegaPixels		
		HDMI: 1920 × 1080, 75Hz DisplayPort: 1920 × 1080, 75Hz USB Type-C: Alt Mode 1920 × 1080, 75Hz		
Input C	onnector	HDMI, Displayport, USB Type-C (Alt Mode)		
Input V	ideo Signal	HDMI, Displayport, USB Type-C (Alt Mode)		
USB Standard		USB3.2 Gen 1 (5Gbps, DC5V, 900mA), USB Power Delivery (65W)		
Number of USB Ports Connector shape		1 Upstream : Type-C 2 Downstream : Type-A		
LAN Port		RJ45		
Output	Video Connector	DisplayPort		
Headph	none Connector	ø 3.5mm mini jack (Stereo)		
Speake	ers	2W × 2 (Stereo speakers)		
Maximum Screen Size		597.8mm W × 336.3mm H / 23.5" W × 13.2" H		
Power	Source	100-240VAC, 50/60Hz, 1.5A		
Power Consumption*		20W typical Standby mode: 0.5W maximum, Off mode: 0.3W maximum		
Dimensions / Net Weight		612.0 × 393.5 - 543.5 × 209.5mm / 24.1 × 15.5 - 21.4 × 8.2" (W×H×D) 6.6kg / 14.6lbs		
Height Adjustment Range 150mm				
Angle		Tilt:Upward: 23 degrees, Downward: 5 degreesSwivel:Left / Right: 45 degrees eachRotation:Clockwise / Counterclockwise: 90 degrees each		
Enviror Conside	imental erations	Operating:Temperature Humidity5 to 35°C / 41 to 95°F 10 to 90% (No condensation)Storage:Temperature Humidity-20 to 60°C / -4 to 140°F 10 to 90% (No condensation)		
Approv	als	TCO Certified, CE, UKCA, TÜV-GS, EAC, VCCI, PSE		


NOTE * When the USB devices are not connected.

SPECIFICATIONS : ProLite XUB2792HSC-B5 H

Size Category		27"		
	Panel technology	IPS (In-Plane-Switching)		
	Size	Diagonal: 27" (68.6cm)		
	Pixel pitch	0.311mm H × 0.311mm V		
LCD Panel	Brightness	250cd/m ² (Typical), 200cd/m ² (Default / Energy Saving)		
Fallel	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available		
	Viewable angle	Right / Left: 89 degrees each, Up / Down: 89 degrees each (Typical)		
	Response time	4ms (Gray to Gray)		
Display	/ Colors	Approx. 16.7M		
Sync F	requency	Horizontal: 30.0-85.0kHz, Vertical: 55-75Hz		
Native Resolution Support max. resolution		1920 × 1080, 2.1 MegaPixels		
		HDMI: 1920 × 1080, 75Hz DisplayPort: 1920 × 1080, 75Hz USB Type-C: Alt Mode 1920 × 1080, 75Hz		
Input C	Connector	HDMI, Displayport, USB Type-C (Alt Mode)		
Input Video Signal USB Standard Number of USB Ports Connector shape		HDMI, Displayport, USB Type-C (Alt Mode)		
		USB3.2 Gen 1 (5Gbps, DC5V, 900mA), USB Power Delivery (65W)		
		1 Upstream : Type-C 2 Downstream : Type-A		
Headpl	hone Connector	ø 3.5mm mini jack (Stereo)		
Speakers		2W × 2 (Stereo speakers)		
Maxim	um Screen Size	597.8mm W × 336.3mm H / 23.5" W × 13.2" H		
Power Source Power Consumption* Dimensions / Net Weight		100-240VAC, 50/60Hz, 1.5A		
		20W typical Standby mode: 0.5W maximum, Off mode: 0.3W maximum		
		612.0 × 393.5 - 543.5 × 209.5mm / 24.1 × 15.5 - 21.4 × 8.2" (W×H×D) 6.6kg / 14.6lbs		
Height Adjustment Range		150mm		
Angle		Tilt:Upward: 23 degrees, Downward: 5 degreesSwivel:Left / Right: 45 degrees eachRotation:Clockwise / Counterclockwise: 90 degrees each		
	nmental lerations	Operating:Temperature Humidity5 to 35°C / 41 to 95°F 10 to 90% (No condensation)Storage:Temperature Humidity-20 to 60°C / -4 to 140°F 10 to 90% (No condensation)		
Approv	rals	TCO Certified, CE, UKCA, TÜV-GS, EAC, VCCI, PSE		

NOTE * When the USB devices are not connected.



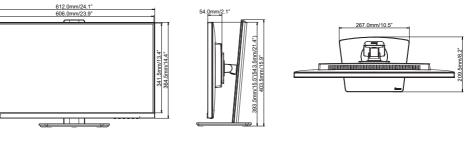



(): Maximum adjustment range

CO	MPL	IANT	тім	ING

Video Mode	Horizontal Frequency	Vertical Frequency	Dot Clock
	31.469kHz	59.940Hz	25.175MHz
640 × 480	37.500kHz	75.000Hz	31.500MHz
	37.861kHz	72.809Hz	31.500MHz
	35.156kHz	56.250Hz	36.000MHz
800 × 600	37.879kHz	60.317Hz	40.000MHz
	46.875kHz	75.000Hz	49.500MHz
	48.363kHz	60.004Hz	65.000MHz
1024 × 768	56.476kHz	70.069Hz	75.000MHz
	60.023kHz	75.029Hz	78.750MHz
1280 × 1024	63.981kHz	60.020Hz	108.000MHz
1200 * 1024	79.976kHz	75.025Hz	135.000MHz
1440 × 900	55.935kHz	59.887Hz	106.500MHz
1440 × 900	70.635kHz	74.984Hz	136.750MHz
1680 × 1050	65.290kHz	60.000Hz	146.250MHz
1920 × 1080	67.500kHz	60.000Hz	148.500MHz
1920 * 1060	83.890kHz	74.970Hz	174.500MHz