

WALL MOUNTING

User manual




CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.


- Machine bracket × 4
- Wall bracket × 4
- Expansion plug × 16
- Wood grain screw × 16
- Pad × 4
- M8 screw × 4
- Positioning code

INSTALLATION



1. Attach the four mounting brackets to the upper VESA holes using the supplied M8 screws. Ensure all brackets are aligned at the same height and securely fastened.

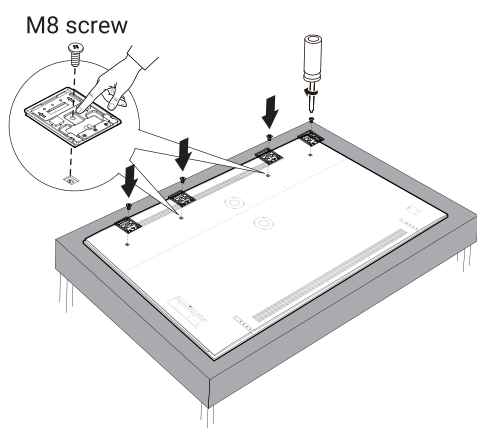

2. Mark the wall mounting position using the positioning card, then drill holes according to the VESA hole spacing. Use a spirit level to ensure the position is horizontal.

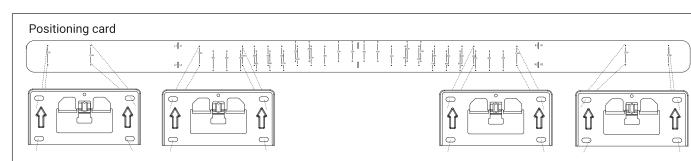


- ① Place the positioning card flat against the wall and hold it in place.
- ② Mark the mounting hole positions using the positioning card.

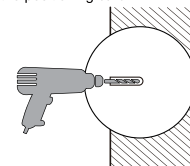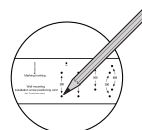


NOTE

For large displays, join the positioning cards and repeat Steps 1–2.

3. Secure the wall brackets to the wall using 16 screws and 16 wall anchors. Ensure the arrow on each bracket points upward toward the display.

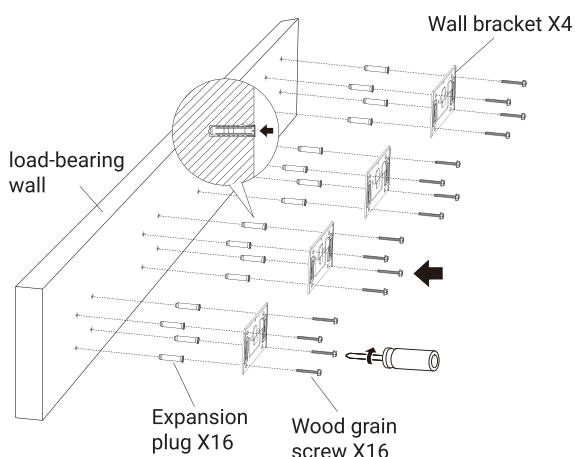


4. Lift the steel cables on all four mounting brackets to the same angle. Detach the pads from the brackets and attach them to the bottom rear edge of the display as shown.


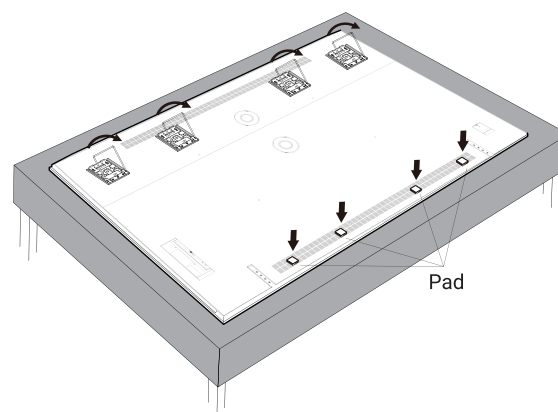


5. Hook the steel cables onto the wall brackets. Lift the display using the handles and push it toward the wall until it is securely attached.

- ① Lift the machine with the handles.

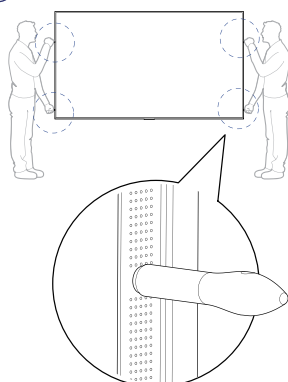


- ②

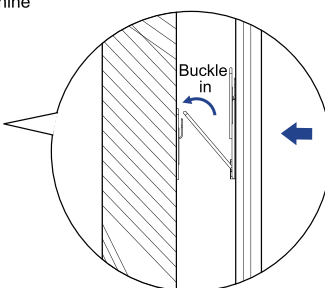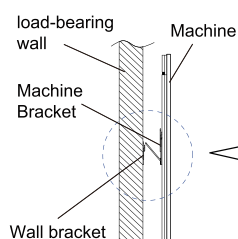


Inserting/unplugging cables:

Method 1: Rotate a certain angle to insert/remove the wire (as shown in Figure ①);

Method 2: Alternatively, remove the screen and then plug/unplug the cable (as shown in Figure ②).

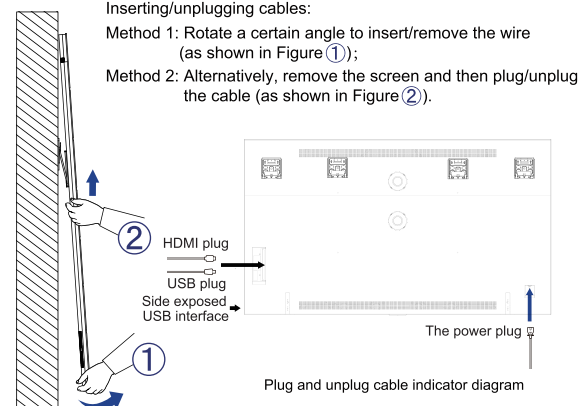

壁挂盒子印刷
颜色黑色

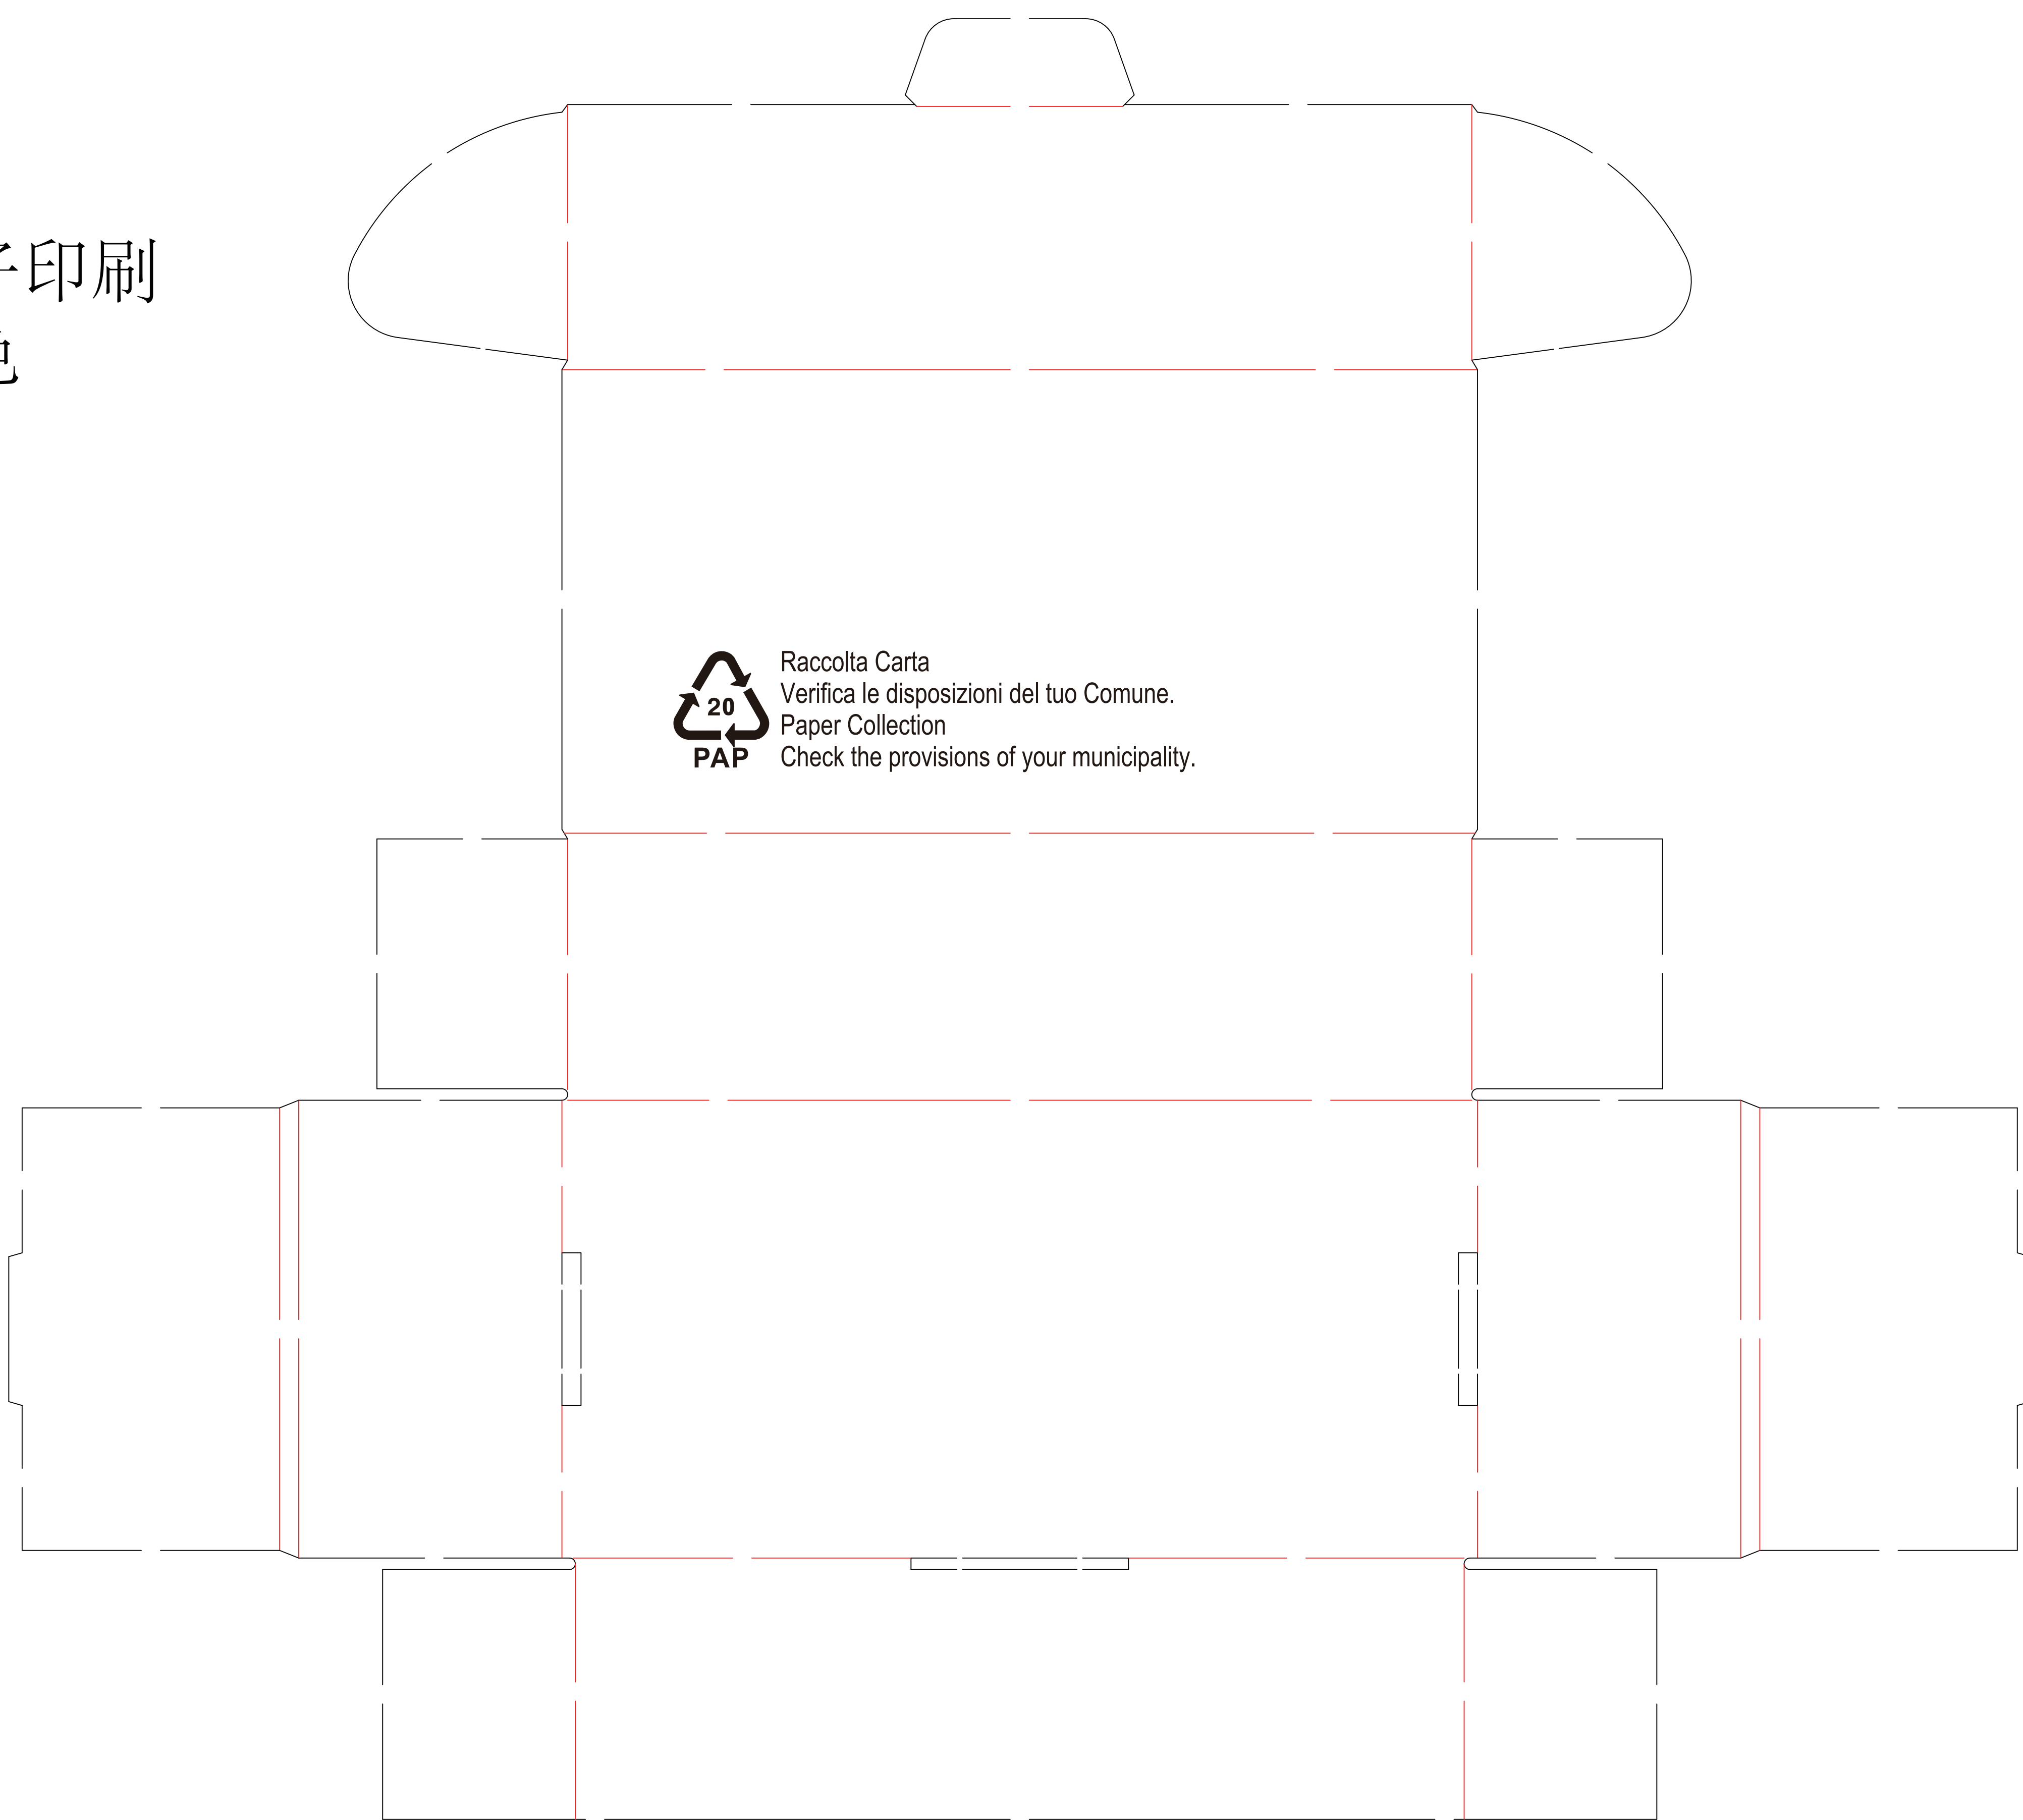

安装纸卡， 插舌结构和材质以供应商为准， 仅在原有基础上删除中文字样

