

## **iiyama Driver Instruction**

Drivers for touch screens with EETI eGalaxTouch controller:

iiyama ProLite Txx31  
 iiyama ProLite Txx32  
 iiyama ProLite Txx34

SR = Resistive

SAW = Surface Acoustic Wave

MSC/MC = Projective Capacitive

### **Windows 7/8/10**

HID compatible, no driver needed.

The touch function should operate without installing any drivers.

### **Linux**

Most recent Linux distributions will work Plug & Play.

Linux (Kernel 3.11 & above is Plug & Play, Kernel 2.4 will need a separate driver download).



### **Other operating systems**

Check available drivers on the controller manufacturer website: <http://www.eeti.com.tw/downloads.html>

*You will go to an external website where you can download drivers. Iiyama did not test these drivers and is not responsible for wrong downloads. Please contact your local IT-helpdesk if you need assistance.*

### **Touch support operation**

#### ■ TOUCH support operation system

Microsoft Windows XP (64 bit and 32 bit)

Microsoft Windows 7 (64 bit and 32 bit)

Microsoft Windows CE 2.13 / 3.0, net 6.0

Linux (Kernel 2.4, 2.6x) & above

Microsoft Windows 8 / 8.1 / 10 (64 bit and 32 bit)

Mac OS X V 10.5 & above

Not support earlier versions.

	Windows8/8.1/10	Windows7*5	Windows7*4	Vista	XP
Default mouse*1	○	○	○	○	○
Touch digitizer*2	○	○	○	○	×
Windows7 gestures*3	○	○	×	×	×

	2K	Windows CE	XP Embedded	Mac OS9,OSX	Linux
Default mouse*1	○	○	○	○	○
Touch digitizer*2	×	×	×	×	×
Windows7 gestures*3	×	×	×	×	×

\*Note: Iiyama does her utmost to provide accurate and complete information about the usage and availability of driver software as much as possible. However, we cannot guarantee all information is correct and will always work.