

MOUNTING BRACKET for webcam User manual

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

■ Bracket A

■ Bracket B


■ Screw PWM4x8 : 2pcs ■ Screw TM3x8 : 4pcs


■ User Manual (this document)

INSTALLATION


A screwdriver is needed for installation / removal.

1. Remove two screws on both sides of the Mylar sheet at the top 3. Attach the Bracket B on top of the Bracket A and tighten those of the back of the monitor. with the screws (TM 3 × 8 mm 2pcs).

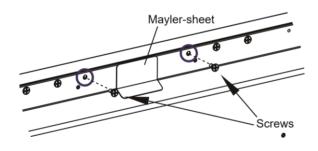


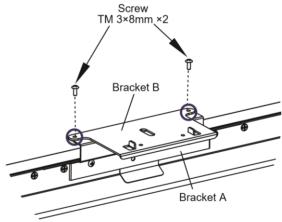

2. Attach the Bracket A to the monitor and tighten those with the screws (TM 3×8 mm 2pcs).

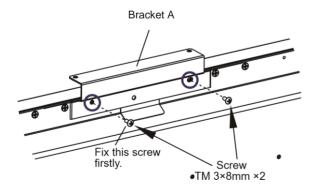

4. Attach your camera module to the Bracket B and tighten those with the screws (PWM 4×8 mm 2pcs).

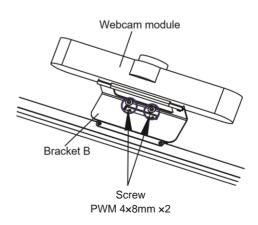



TE86_75_6504MIS_mounting-bracket-webcam&NUC-manual.indd 12020/11/30 17:54:27

MOUNTING BRACKET for NUCUser manual


CHECKING THE CONTENTS OF THE PACKAGE

The following accessory is included in your package. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.


■ Bracket NUC

INSTALLATION

A screwdriver is needed for installation / removal.

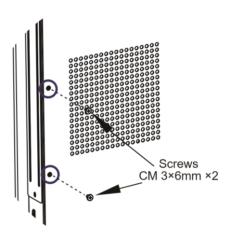

- 1. Remove the screws (CM 3×6 mm 2pcs) on the back of the monitor.
- 2. Attach the Bracket NUC to the monitor and tighten those with the screws (CM 3 \times 6 mm 2pcs).

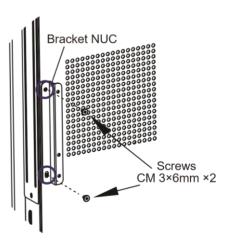

3. Attach your NUC to the Bracket NUC and tighten those with the screws (NUC accessory M4 screw 2pcs).

