

USER MANUAL

ProLite

LCD Monitor

ENGLISH

ProLite LH5580S

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read this comprehensive manual carefully before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.



TABLE OF CONTENTS

FOR YOUR SAFETY.....	1
SAFETY PRECAUTIONS.....	1
SPECIAL NOTES ON LCD MONITORS.....	3
CUSTOMER SERVICE.....	4
CLEANING.....	4
BEFORE YOU OPERATE THE MONITOR.....	5
FEATURES.....	5
CHECKING THE CONTENTS OF THE PACKAGE.....	6
UNPACKING.....	7
CONTROLS AND CONNECTORS : MONITOR.....	8
INSTALLATION.....	10
CONTROLS AND CONNECTORS : REMOTE CONTROL.....	17
PREPARING THE REMOTE CONTROL.....	18
BASIC OPERATION.....	19
CONNECTING YOUR MONITOR.....	22
COMPUTER SETTING.....	26
OPERATING THE MONITOR.....	27
ADJUSTMENT MENU CONTENTS.....	29
SCREEN ADJUSTMENTS.....	47
POWER MANAGEMENT FEATURE.....	50
TROUBLE SHOOTING.....	51
RECYCLING INFORMATION.....	52
APPENDIX.....	53
SPECIFICATIONS.....	53
DIMENSIONS.....	54
COMPLIANT TIMING.....	55
PIP SUPPORT SCREEN TABLE.....	56

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10 cm (or 4 inches) from any walls. Do not remove the tilt stand when operating the monitor. Ventilation slots on the back of the cabinet will be blocked and the monitor may overheat if the stand is removed. This may cause fire or damage. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

NOTE

- When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
- Due to the nature of the backlight, the screen may flicker during initial use. Turn off the Power Switch and then turn it on again to make sure the flicker disappears.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.
- Contact your dealer or iiyama service center for the backlight replacement when the screen is dark, flickering or not lighting up. Never attempt to replace it by yourself.
- Max. non-stop operating time and conditions
 - (1) If a static image is displayed continuously, it is recommended to disrupt it with a motion picture.
 - (2) It is recommended to periodically change the background colour and background image.
 - (3) Maximum operating time of the display is 24 hours/7 days, if the Screen Saver (MOTION mode) function is set on. If the Screen Saver function is off, do not exceed a 12 hours non-stop operating time limit.
 - (4) If the screen is active for a longer period of time, it is recommended to
 - I. Run the screensaver of the picture output device (motion picture or black pattern)
 - II. Power off the system for a while
 - (5) Make sure that the screen is suitably ventilated, or is used in conjunction with climate control system if installed into any bespoke cabinets.
 - (6) We strongly recommend an active cooling system with fans for long operating times, especially for high luminance LCD models.
- This LCD cannot be used outdoors.

CUSTOMER SERVICE

NOTE

- If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

WARNING

- If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

CAUTION

- For safety reasons, turn off the power switch and unplug the monitor before you clean it.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner	Benzine	Abrasive cleaner
Spray-type cleaner	Wax	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

CABINET

Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.

LCD

Periodic cleaning with a soft dry cloth is recommended.

SCREEN

Don't use tissue paper etc. because these will damage the LCD screen.



















BEFORE YOU OPERATE THE MONITOR

FEATURES

- ◆ Supports Resolutions up to 1920 × 1080
- ◆ High Contrast 4000:1 / Brightness 450cd/m²
- ◆ Digital Character Smoothing
- ◆ Automatic Set-up
- ◆ Stereo Speakers
2 × 10W Stereo Speakers
- ◆ Plug & Play VESA DDC2B Compliant
Windows® XP/Vista/7/8 Compliant
- ◆ Power Management (ENERGY STAR® VESA DPMS Compliant)
- ◆ VESA Mounting Standard (400mm×400mm) Compliant

CHECKING THE CONTENTS OF THE PACKAGE


The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

 <p>For EU Power Cable *</p>	 <p>Screw(M4) x2 (For the monitor fall prevention clampers)</p>	 <p>Corner protector x4</p>
 <p>For UK Power Cable *</p>	 <p>Clamper x3 (For tying cables)</p>	 <p>Screw(M3) x4 (For the corner protectors)</p>
 <p>VGA (D-sub) Signal Cable</p>	 <p>Clamper x2 (For holding the HDMI cables)</p>	 <p>Option slot cover</p>
 <p>DVI-D Signal Cable</p>	 <p>Band x4 (For the HDMI cable holding clampers)</p>	 <p>iiyama Logo Sticker</p>
 <p>Remote Control</p>	 <p>Wall mount spacer x9</p>	 <p>Safety Guide</p>
 <p>Clamper x2 (For fall prevention)</p>	 <p>Cable Holder (For holding the power cable)</p>	 <p>Quick Start Guide</p>

CAUTION * The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.


UNPACKING

- ① Before unpacking your monitor, prepare a stable, level, and clean surface near a wall outlet. Set the LCD Monitor box in an upright position and open from the top of the box before removing the top cushions.
- ② Remove the carton holders.
- ③ Remove the top cushion and take the accessories box and the Monitor out.

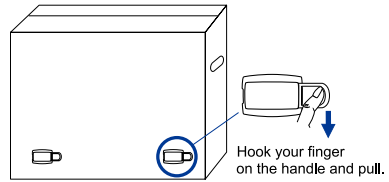


CAUTION

Moving the monitor requires at least two people. If not, it may drop and could result in a serious injury.
When moving/shipping the monitor, please hold by the carton holders.

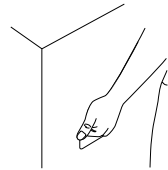


CONTROLS AND CONNECTORS : MONITOR

<Back Controller>

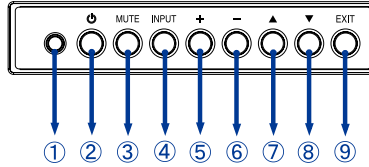

①	Ambient Light Sensor	Detects ambient lighting conditions around the Monitor and adjusts screen brightness automatically when the Ambient Light Sensor function is activated.
②	⏻	Power Button
③	MUTE	Mute Button
④	VIDEO SOURCE	Input Select Button
⑤	+	+ Button
⑥	-	- Button
⑦	▲	Up Button
⑧	▼	Down Button
⑨	EXIT	Exit Button


<Front>

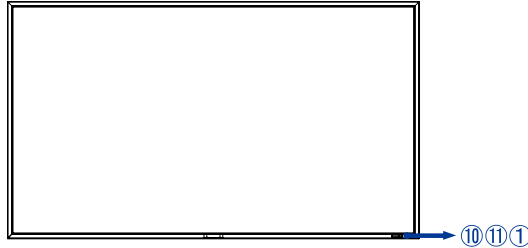

⑩	Power Indicator	Green	Steady: Normal Operation
		Red	Steady: Power Off Flash: The LCD monitor has an error (detected by the self-diagnostic function).
		Green&Red	Steady: Power Management Steady(Red) and Flash(Green) : The LCD monitor is in the schedule standby mode.
		Off	Main Power Off
⑪	Remote Sensor	Remote Sensor	

About the Power

Within 2 seconds after turning off the power using the POWER button on the wireless remote control or on the monitor or by a communication command, don't turn off the main power switch, don't disconnect the power cord or don't turn off the breaker. If the AC power is turned off immediately after switching the display off, all the OSD settings including the language selection may be reset to the factory default settings.

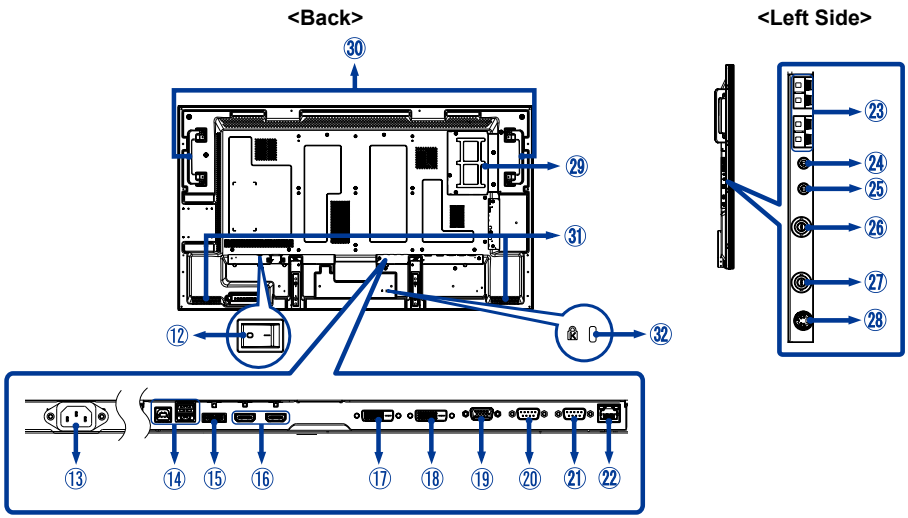

⑫	MAIN POWER SWITCH	POWER SWITCH	Main Power Switch
⑬	AC IN	AC-INLET	AC Connector
⑭	USB Hub	1Upstream(SeriesB) 2Downstream(SeriesA)	USB Connector
⑮	DisplayPort (DP)	DisplayPort	DisplayPort Connector
⑯	HDMI1/HDMI2	HDMI	HDMI Connector
⑰	DVI-D IN	DVI-D 24pin	DVI-D 24pin Connector
⑱	DVI-D OUT	DVI-D 24pin	DVI-D 24pin Connector
⑲	D-SUB/YPbPr IN	VGA(D-sub) mini 15pin	D-SUB mini 15pin Connector
⑳	RS232C IN	D-SUB 9pin	RS232C Connector
㉑	RS232C OUT	D-SUB 9pin	RS232C Connector
㉒	LAN	RJ45	LAN Connector
㉓	SPEAKERS OUT	Jack	External Speakers Connector
㉔	AUDIO OUT	Mini Jack	Audio output Connector
㉕	AUDIO IN (PC Audio In)	Mini Jack	Audio Connector
㉖	VIDEO OUT	BNC	Video Connector
㉗	VIDEO IN	BNC	Video Connector
㉘	S-VIDEO IN	Mini Din 4pin	S-Video Connector
㉙	Option Slot		Option Slot
⑳	Handles		Handles
㉙	SPEAKERS		Speakers
㉚	Keyhole for Security Lock*		Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

INSTALLATION


CAUTION

- Follow the manual instructions for the type of mount you have selected. Refer all servicing to qualified service personnel.
- Moving the monitor requires at least two people.
- Before installing, please make sure the wall is strong enough to hold the necessary weight of the display and the mount.

[VENTILATION REQUIREMENTS FOR ENCLOSURE MOUNTING]

CAUTION


Don't block the holes in the rear of the monitor shown in the figure above. If they are blocked, heat accumulates inside the monitor, causing breakdown. The upper limit of the operation guaranteed ambient temperature when the monitor is installed in the landscape position is 40°C. When installing the monitor in a case or an enclosure, ensure adequate ventilation to keep the temperature inside the case 40°C or lower by providing a cooling fan or ventilation holes in the case. The upper limit when the monitor is in the portrait or face-up position is 35°C. This LCD has a temperature sensor and cooling fan. If the LCD becomes hot, the cooling fan will turn on automatically. If the LCD becomes overheated, the "Caution" menu will appear. If the "Caution" menu appears, stop using the monitor and allow it to cool. When the LCD display is used in an enclosure or with protection on LCD surface, please check the inside temperature of the monitor by "HEAT STATUS" (See page 42). If the temperature is higher than the normal level, set "COOLING FAN" to ON using the SCREEN SAVER function (See page 35).

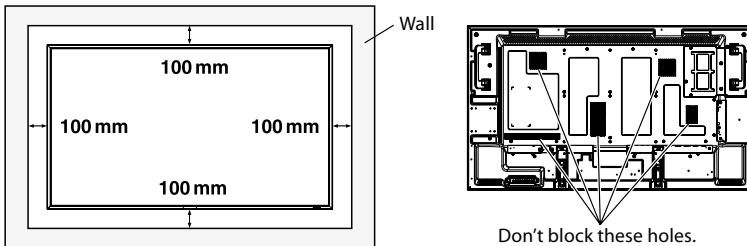

[TO AVOID THE MONITOR FROM FALLING]

CAUTION

When installing the monitor using the tabletop stands (option), take measures to prevent the monitor from falling over in case of an earthquake or other disaster to lessen the probability of injury and damage resulting from the fall. As shown in the figure, secure the monitor to a solid wall or pillar using rope (commercially available) strong enough to bear the weight of the monitor. [approximately 30.1 kg (with the optional stands)] When using screw hooks (commercially available), use ring hooks, not C-hooks (with opening).

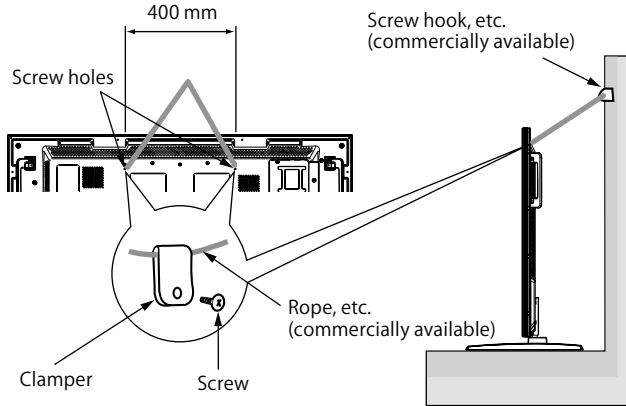

CAUTION

- The effect of the fall prevention substantially depends on the strength of brackets and base to which the fall prevention devices is attached. When you cannot ensure sufficient strength, provide adequate reinforcement.
- Though the recommended fall prevention is intended to lessen the probability of injury and damage, it doesn't assure its effectiveness against any kind of earthquake or disaster.
- Do not sleep where the monitor may topple over or fall in case of an earthquake or other disaster.
- Before moving the monitor, remove the rope that is securing the monitor. Failure to do so may result in injury or breakdown of the monitor.


[USING THE WALL MOUNT OR CEILING MOUNT]

Lay the screen face down

Lay the protective sheet on a table, which was wrapped around the monitor when it was packaged, beneath the screen surface so as not to scratch the screen surface.

This device cannot be used or installed without the Tabletop Stand or other mounting accessory. Failure to follow the correct mounting procedures can result in damage to the equipment or injury to the user or installer. Product warranty does not cover damage caused by improper installation. Failure to follow these recommendations can void your warranty.

For installation, use M6 screws (with a loose-proof spring washer and having a length 10 mm longer than the thickness of the mounting bracket) and tighten them securely.

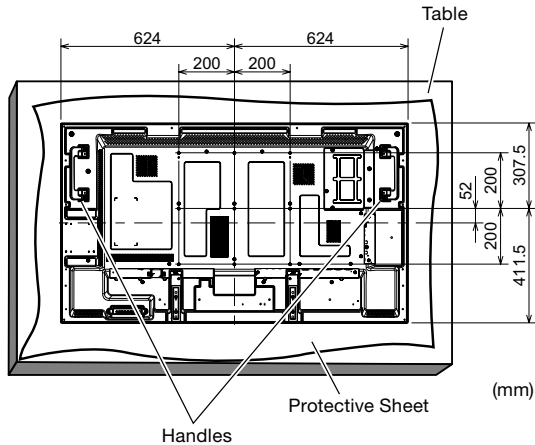

CAUTION

For preventing the monitor from falling:

- Install the monitor with metal brackets for wall or ceiling installation (commercially available) on your own responsibility. For detailed procedures of installation, refer to the instructions of the metal brackets.
- To lessen the probability of injury and damage resulting from fall of the monitor in case of earthquake or other disaster, be sure to consult the bracket manufacturer for installation location.
- To lessen the risk of falling of the monitor, thread commercially available rope through the handles at the right and left of the monitor and secure the rope to the wall mount brackets or ceiling mount brackets. Use rope that can bear a load 6 times the weight of the monitor (55" approximately 171 kg;).
- Do not sleep where the monitor may topple over or fall in case of an earthquake or other disaster.
- Use screws having enough strength to support the LCD display monitor (made of stainless steel etc.).


About the metal bracket:

- Use a VESA-compliant metal bracket.
- Before installation, make sure that the installation surface has sufficient strength.
- Use a metal bracket (commercially available) that is strong enough to hold the monitor.
- Before installation, check the strength and other properties to ensure the safety.
- Do not block the heat dissipating holes in the monitor with the metal bracket. See page 14.
- For details of the mounting procedure and the safe installation procedure, see the user instructions of the metal bracket (commercially available) to be used.
- Take measures such as using multiple metal brackets, holding the monitor at several points, and taking measures to prevent falling or dropping in case of a problem.


[PREVENTING THE HANDLES FROM TOUCHING THE WALL]

By attaching the handles in the opposite orientation, you can reduce the depth of the monitor.

1. Remove the screws that are holding the handles.

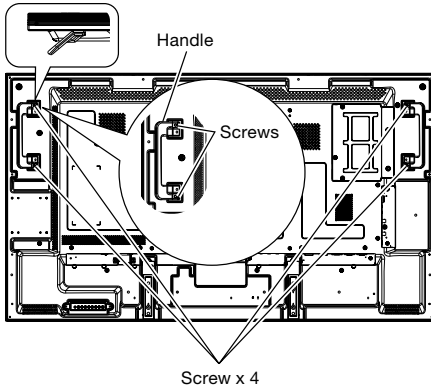


2. Attach the handles in the opposite orientation and secure them using the screws you have removed in step 1.

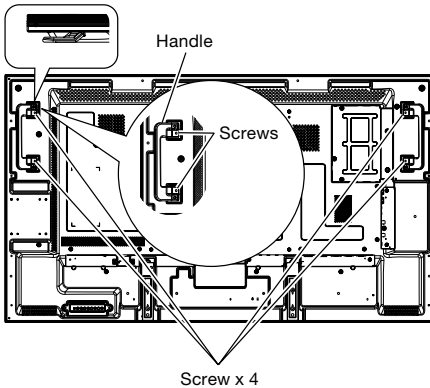

[REMOVING THE STAND GUIDE FRAMES]

By removing the stand guide frames, you can reduce the depth of the monitor.

1. Remove the screws that are holding the stand guide frames.

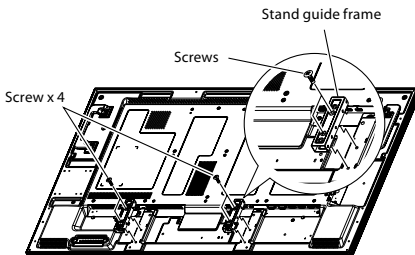


2. Slightly move and remove the stand guide frames.

NOTE Retain the stand guide frames and the screws that you have removed because they are necessary to install the monitor using the option stands.

[USING THE WALL MOUNT SPACERS]


When the option slot cover or the stand guide frames touch the wall or block the heat dissipating holes in the rear of the monitor, use the wall mount spacers (accessories) to mount the metal bracket (commercially available).

Put the wall mount spacers (9 pcs.) between the metal bracket and the wall mount screw holes of the monitor and attach them using screws (a).

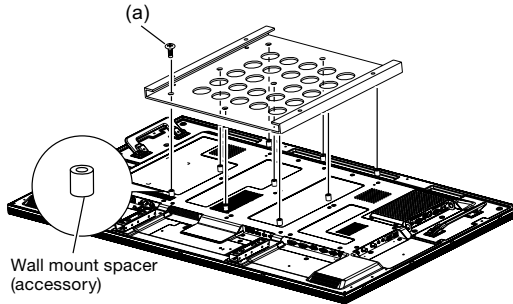

(a): Screw for attaching the wall mount spacer (M6, 9 pcs.)

[WALL MOUNTING]

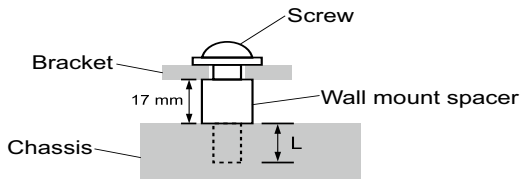

CAUTION

When using the wall mounting, consideration of thickness of the mounting stage needs to be taken. Tighten the M6 Screw with washer which "L" length is 10mm to fasten the monitor.

[INSTALLING IN THE PORTRAIT OR FACE-UP POSITION]

The monitor can be installed in the portrait or face-up position.
Ensure that the monitor is oriented as shown below.

CAUTION


- The operating environmental condition (temperature) when the monitor is in the portrait or face-up position is 0°C to 35°C.
- Proper operation of the monitor is not guaranteed when it is not mounted as shown below (upside down, face down, etc.).
- In the portrait or face-up position, the lifetime of the backlight is shorter than that in the landscape position.
- When the monitor is in the face-up position, be sure to set COOLING FAN to ON using SCREEN SAVER in the CONFIGURATION1 menu of the OSD screen function.

Installation in the portrait position

The logo should be on the LEFT side when viewed from the front of the monitor.

NOTE

This monitor doesn't have a function to rotate displayed images. To display images in the portrait orientation, use already rotated images.

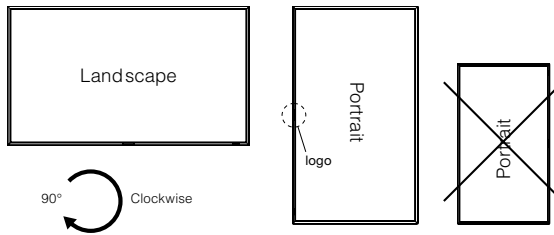


Installation in the face-up position

Face-up



Face-down



Operation environment for portrait or face-up installation

When the monitor is installed in the portrait or face-up position, the following conditions should be satisfied.

Temperature 0 - 35°C / 32 - 95°F


Humidity 20 - 80% (without condensation)

[ATTACHING THE CORNER PROTECTORS]

CAUTION


It is recommended to use the corner protectors (accessories). When installing the monitor, hold its body firmly. If you hold the monitor by the corner protectors when moving it, the monitor may detach and fall from the corner protectors, causing injuries.

Attach the corner protectors using the accessory screws (c)

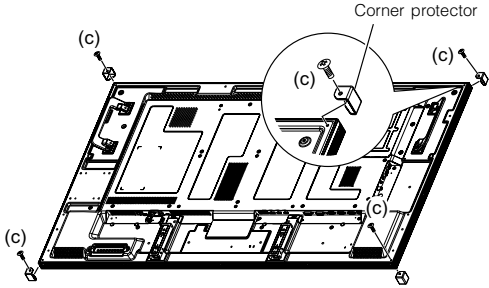

(c): Screw for attaching the corner protector (M3, 4 pcs.)

CONTROLS AND CONNECTORS : REMOTE CONTROL

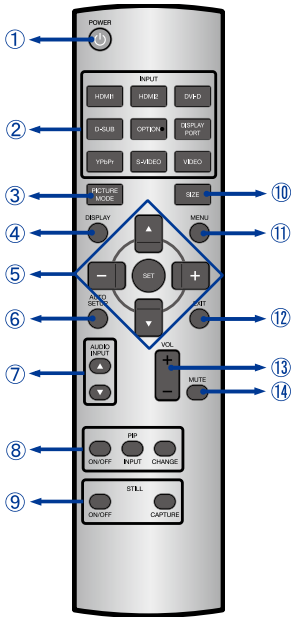

①	POWER* ¹	Turns the monitor ON and OFF.
②	INPUT* ²	Selects the source.
③	PICTURE MODE	Selects the picture mode. See page 28.
④	DISPLAY	Provides resolution, source, audio input, picture size and color system mode information.
⑤	SET	Confirms your selection or save changes.
	▲ ▼ - +	Navigates through submenus and settings. ▲: Up Button ▼: Down Button -(Minus): - / Left Button +(Plus): + / Right Button
⑥	AUTO SETUP* ³	Displays the auto setup menu.
⑦	AUDIO INPUT	Selects the audio input according to the video input. See page 28.
⑧	PIP	ON/OFF : Switches the PIP or POP mode on/off. INPUT : Selects video to be displayed in the sub picture. CHANGE : Changes the main picture with the sub picture.
⑨	STILL	ON/OFF : Switches the still picture mode on/ off. CAPTURE : Captures the new picture.
⑩	SIZE	Selects the picture size. See page 28.
⑪	MENU	Opens the monitor's the OSD Menu or closes the OSD Menu. When the menu system is already open, pressing this button will select the previous submenu.
⑫	EXIT	Returns to a previous menu.
⑬	VOLUME(VOL)	VOL- : Decreases the sound volume. VOL+ : Increases the sound volume.
⑭	MUTE	Turns on or off the mute function when the Menu is not displayed.

*¹ When the power indicator is not lit, no controls will work.

*² OPTION can be used when an expansion module is mounted on the option slot.

*³ Only D-SUB Input.


PREPARING THE REMOTE CONTROL

To use the remote control, insert the two dry batteries.


CAUTION

Do not use any other batteries other than those specified in this manual for the Remote Control. Do not insert old and new batteries together in the Remote Control. Make sure that the terminals match the "+" and "-" indications in the battery compartment. Burst batteries or the electrolyte from these batteries may cause stains, fire or injury.


- ① Unlock and pull up the battery cover as shown below.

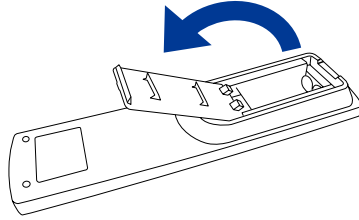

- ② Align and insert two AAA batteries according to their plus and minus ports (as indicated in the remote control).

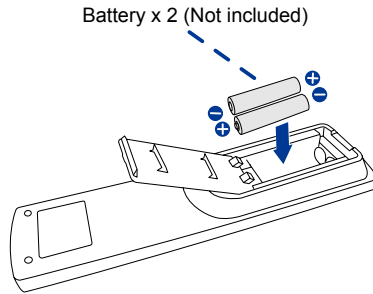

- ③ Replace the battery cover in the direction of the arrow and snap it back into place.

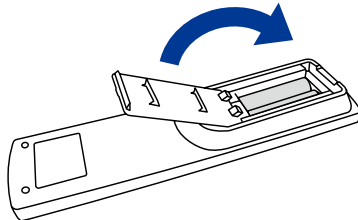

NOTE

- Replace with new batteries when the Remote Control does not work close to the monitor. Use AAA dry batteries.
- Operate the Remote Control by pointing it toward the Remote Sensor on the monitor.
- Other manufacturers remote control will not work with this monitor. Use the provided Remote Control ONLY.
- Used batteries needed to follow the local rules to be discarded. (Suggestion: to dispose of used batteries please follow correct policy as per your local regulations.)


BASIC OPERATION

■ Turning the monitor ON

The monitor is turned On and the Power Indicator turns to Green when you press the POWER Button on the monitor or the Remote Control. The monitor is turned Off and the Power Indicator turns to Red when you press the POWER Button on the monitor or the Remote Control. Press again to turn On the monitor.

NOTE


Even when using the power management mode or turning OFF the Power Switch, the monitor will consume a small amount of electricity. Disconnect the Power Cable from the power supply whenever the monitor is not in use or during the night, to avoid unnecessary power consumption.

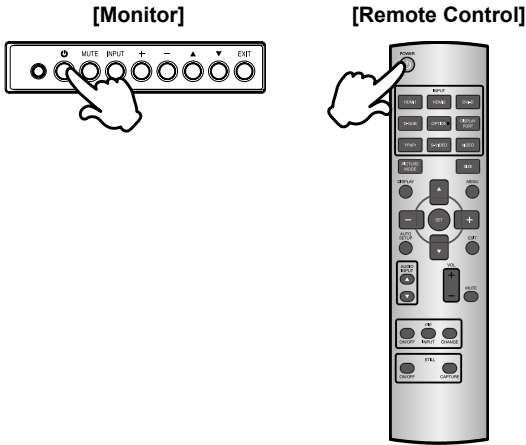

■ Display the adjustment menu page

The menu page appears on the screen when you press the EXIT Button on the monitor or the MENU Button on the Remote Control.


The menu page disappears when you press the EXIT Button again.

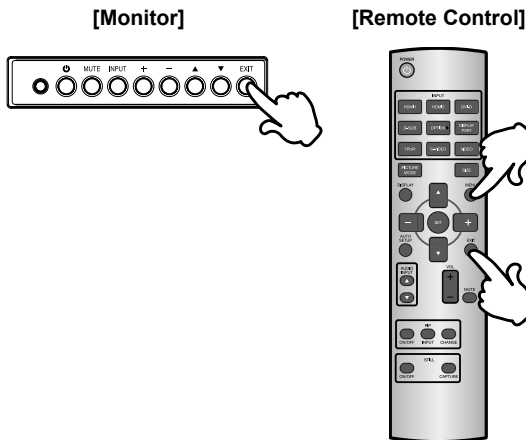


■ Move the cursor vertically

Select adjustment by pressing the ▲ / ▼ Button while the menu page is displayed on the screen.

[Monitor]




[Remote Control]

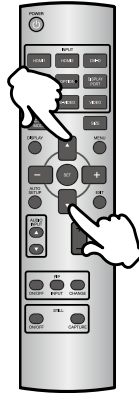

■ Move the cursor horizontally

Select menu or setting, or perform the adjustment by pressing the + / - Button while the menu page is displayed on the screen.

[Monitor]



[Remote Control]




CONNECTING YOUR MONITOR

- ① Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the Power Cable to the monitor first and then to the power supply.
- ④ Turn on your monitor (Main Power Switch and Power Switch) and computer.

- NOTE**
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
 - For connection to Macintosh computers, contact your local iiyama dealer or regional iiyama office for a suitable adaptor.
 - Make sure you tighten the finger screws at each end of the Signal Cable.

[Example of Connection]

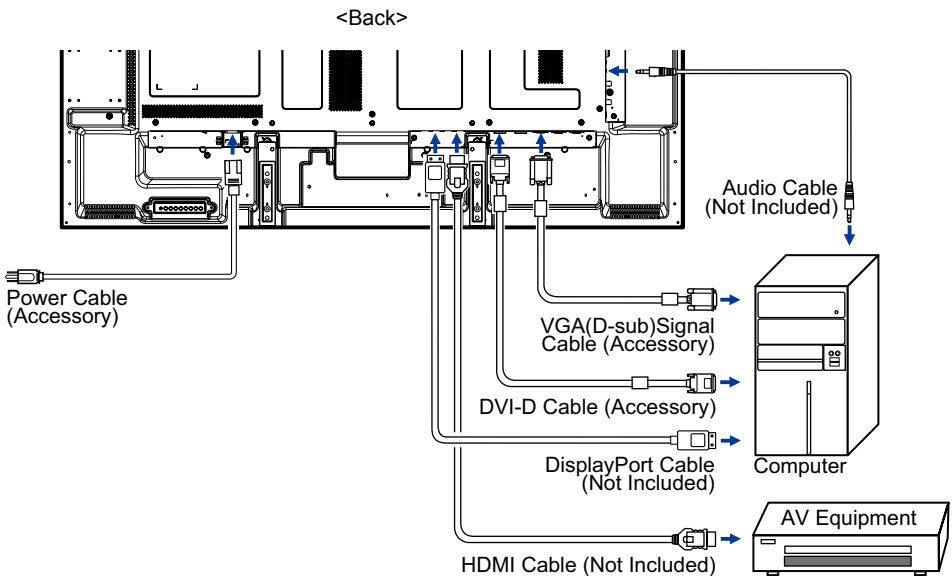


[Connection example with the peripheral device]

CAUTION

Turn off the power switch and unplug the monitor and peripherals before connection to avoid electric shock or damage.

NOTE

- Refer to the user manual of peripherals at the same time.
- Ensure you have the necessary cables as required.

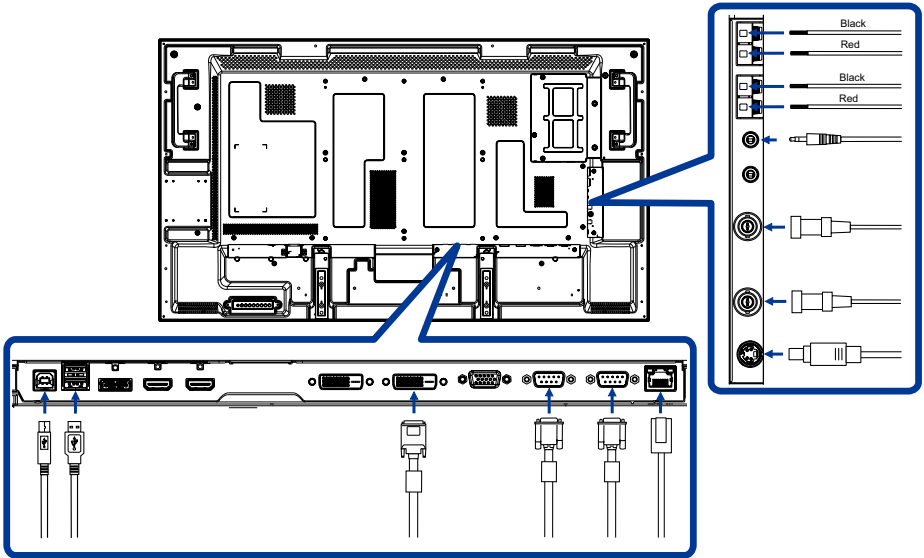

[PREVENTION OF DISCONNECTION OF HDMI CABLE]


For connecting an HDMI cable to the connector on the monitor, it is recommended to secure the cable using an accessory clammer to prevent accidental disconnection.

1. Connect an HDMI cable to the connector on the monitor.
2. Secure the HDMI cable using a clammer (accessory) and a band (accessory).
 - ① Remove the screw from the monitor.
 - ② Attach the clammer to the monitor using the screw you have removed in step ①.
 - ③ Secure the HDMI cable and the clammer using the band.


NOTE

The band isn't reusable. The monitor comes with 2 spare bands.

To replace the band, cut and remove the existing band and attach a new one of the same shape (commercially available, 2.5 mm in width and approximately 100 mm in length).

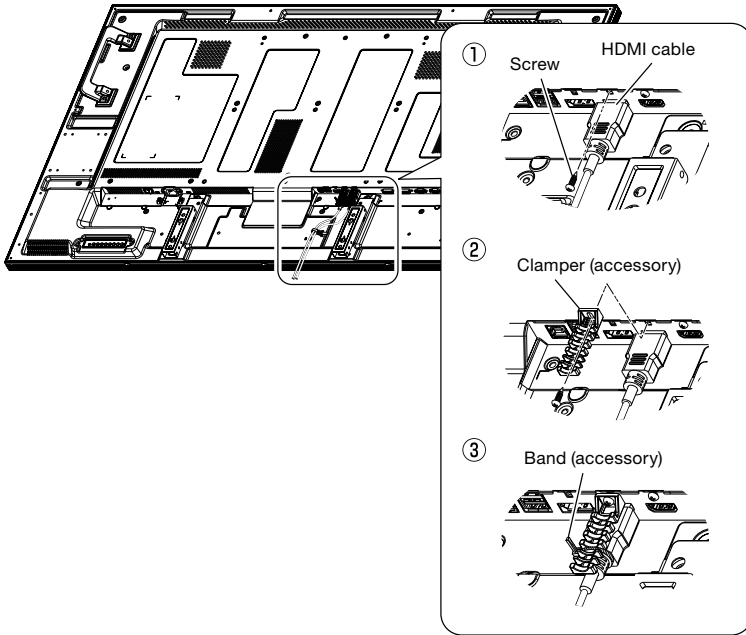

3. Secure the HDMI cable using a clammer (accessory) and a band (accessory).

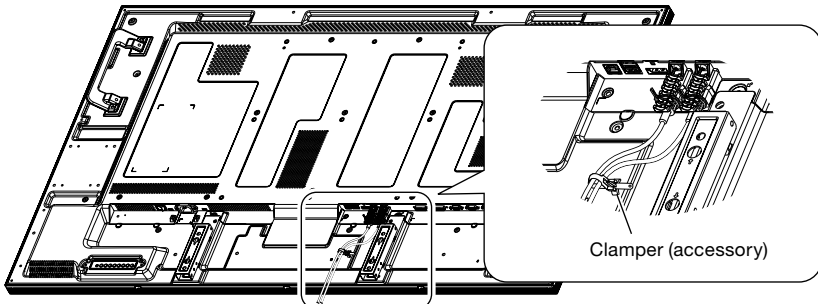

[CONNECTING THE POWER SOURCE]

Before making connections

Check that the main power switch is off.

NOTE


Please refer to "Important Safety Instructions" and "Installation, Ergonomics, Care, and Service" in this manual for proper selection of the AC power cord. Use the clammer to prevent accidental disconnection of the power cord.

1. Insert the power connector of the power cord fully and firmly into the AC IN connector of the monitor.
2. Secure the power connector using the cable holder (accessory).



WARNING

Don't insert the cable holder into the power outlet socket. Doing so may cause electric shock.

- ① Fit both ends of the cable holder to the monitor.
- ② Engage the cable holder in Parts A.
- ③ Secure the power connector with the cable holder.

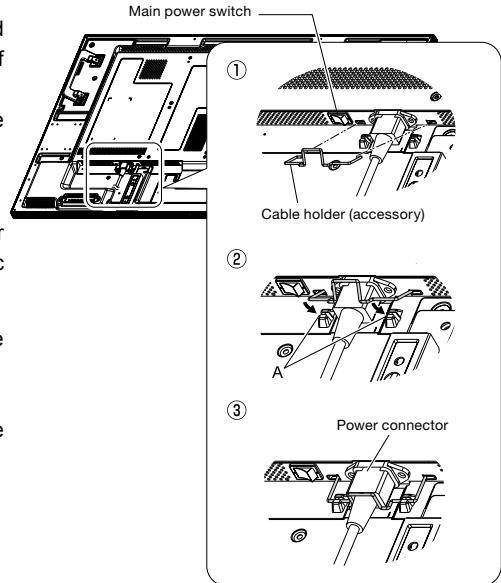

3. Secure the power cord using the clammer (accessory).
4. Insert the power plug into the power outlet socket.
 - Fully insert the prongs into the power outlet socket. Loose connection may cause noise.
 - Don't plug and unplug the power cord repeatedly in a short time of period.

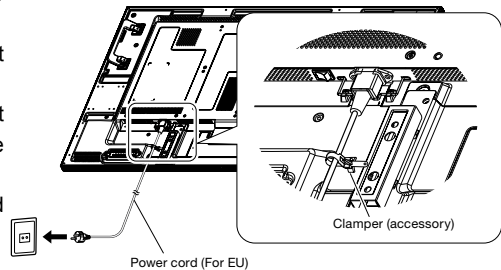

COMPUTER SETTING

■ Signal Timing

Change to the desired signal timing listed on page 55 : COMPLIANT TIMING.

■ Windows XP/Vista/7/8 Plug & Play

The iiyama LCD monitor complies with DDC2B of VESA standard. The Plug & Play function runs on Windows XP/Vista/7/8 by connecting the monitor to DDC2B compliant computer with the Signal Cable supplied.

For installation on Windows XP: The monitor Information File for iiyama monitors may be necessary for your computer and obtained via the Internet, using the address:

<http://www.iiyama.com>


NOTE

- Monitor Drivers are not required in most cases for Macintosh or Unix operating systems. For further information, please contact your computer dealer first for advice.

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 55. You are also able to adjust the picture by following the button operation shown below. For more detailed adjustments, see page 47 for SCREEN ADJUSTMENTS.


- 1 Press the **MENU Button (Remote Control)** or **EXIT Button (Back Controller)** to start the On Screen Display feature. There are additional Menu items which can be switched by using the **▲ / ▼ Buttons**.

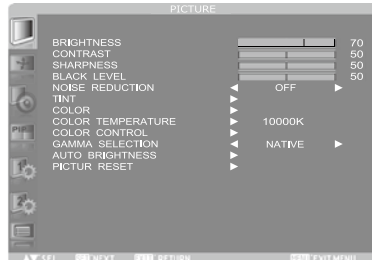

- 2 Select the Menu item of the adjustment you want to make. Press the **SET Button (Remote Control)** or **INPUT Button (Back Controller)** and enter the menu page. Then, use the **▲ / ▼ Buttons** to highlight the desired adjustment item.
- 3 Press the **SET Button (Remote Control)** or **INPUT Button (Back Controller)** again. Use the **+ / - Buttons** to make the appropriate adjustment or setting.
- 4 Press the **EXIT Button** to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for vertical position, select Menu item of Screen. Then, select "V POSITION" by using the **▲ / ▼ Buttons**.

Use the **+ / - Buttons** to change the vertical position settings. The vertical position of the overall display should be changing accordingly while you are doing this.

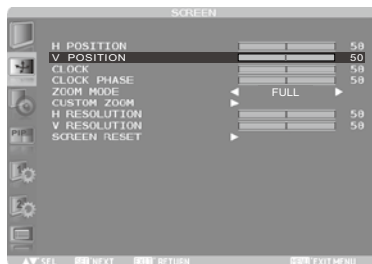

Press the **EXIT Button** lastly, it ends, all changes are saved in the memory.

NOTE

- The **EXIT Button** can be used to return previous menu item.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- Adjustments for Image Position, Clock and Phase are saved for each signal timing. Except for these adjustments, all other adjustments have only one setting which applies to all signal timings.

[CONTROL LOCK MODE]

● Back Controller Button:


Pressing and holding the ▲ and ▼ buttons for about 3 seconds when Menu is not displayed, will lock/unlock the Back Controller Button Lock function.

Direct

* Available for Remote Control only.

● Picture Size:

Press the SIZE button when Menu is not displayed.

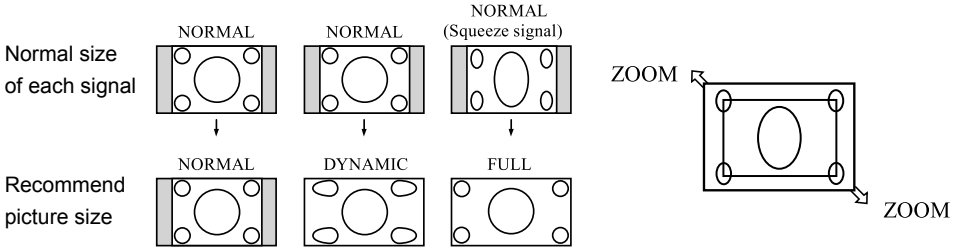

NORMAL: Images supplied from external devices such as PC and DVD fit the screen, keeping their original aspect ratio.

FULL: Images are displayed on the entire screen.

DYNAMIC: 4:3 images are enlarged on the entire screen with non-linearity. (Round images may be cut when enlarged.)

CUSTOM (ZOOM): You can enlarge the displayed images beyond the active display area. The portions of the image out of the display area aren't visible.

REAL: Images are displayed in their original sizes.

- "DYNAMIC" can be selected for video input (YPbPr, VIDEO, and S-VIDEO).

● Picture Mode:

Press the PICTURE MODE button when Menu is not displayed.

HIGHBRIGHT: The brightness is maximized.

STANDARD: Factory default setting.

sRGB: Suitable for color matching with sRGB-compliant devices.

CINEMA: Suitable for viewing movies.

- "sRGB" can be selected for computer input (HDMI1, HDMI2, DVI-D, D-SUB and DISPLAYPORT).

- "CINEMA" can be selected for video input (HDMI1, HDMI2, YPbPr, VIDEO and S-VIDEO).

● Audio Input Change:

Press the AUDIO INPUT ▲ / ▼ buttons when Menu is not displayed.


Note that the selectable audio inputs vary depending on the currently selected video signal input.

Selection of the video signal input	Operation
HDMI1 or HDMI2	ANALOG ↔ HDMI*
DVI-D	ANALOG only
D-SUB	ANALOG only
DISPLAYPORT	ANALOG ↔ DISPLAYPORT
YPbPr	ANALOG only
S-VIDEO	ANALOG only
VIDEO	ANALOG only

* The audio of HDMI1 or HDMI2 being selected is output as the HDMI audio.

ADJUSTMENT MENU CONTENTS

PICTURE

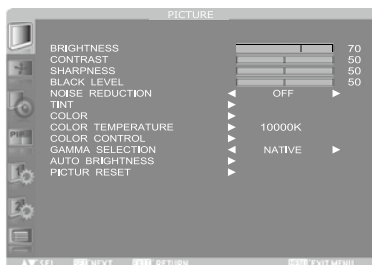


Adjustment Item	Problem / Option	Button to Press
BRIGHTNESS* ¹	Too dark	+
	Too bright	-
CONTRAST* ²	Too dull	+
	Too intense	-
SHARPNESS	Too soft	+
	Too sharp	-

NOTE If you increase the sharpness setting value too much, lines may appear double. In such a case, decrease the sharpness setting value.


BLACK LEVEL* ²		Brightness of back light is reduced.	+ -
NOISE REDUCTION* ^{2,3}	OFF	Noise Reduction is turned off.	
	LOW	Electronic image noise caused by different media players is reduced.	
	MIDDLE	Electronic image noise caused by different media players is reduced.	
	HIGH	Electronic image noise caused by different media players is reduced.	
TINT* ²	TINT	Purplish Greenish	+ -
	RED HUE	You can set the Colours.	+ -
	MAGENTA HUE		
	BLUE HUE		
	CYAN HUE		
	GREEN HUE		
YELLOW HUE			
COLOR* ²	COLOR	Too weak Too strong	+ -
	RED HUE	You can set the Colours.	+ -
	MAGENTA HUE		
	BLUE HUE		
	CYAN HUE		
	GREEN HUE		
YELLOW HUE			

PICTURE

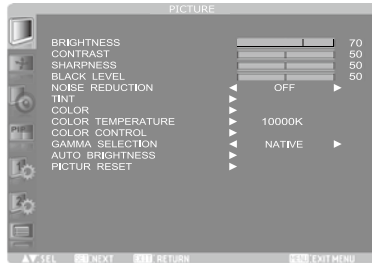

Adjustment Item	Problem / Option		Button to Press
COLOR TEMPERATURE *2	Reddish Bluish		+ -
COLOR CONTROL *2	RED	Too weak	+
	GREEN		
	BLUE	Too strong	-
GAMMA SELECTION	Select the gamma mode. NATIVE / S GAMMA / 2.2 / 2.4 / OPTION / PROGRAMMABLE. PROGRAMMABLE can change the GAMMA characteristic curve via a computer. Contact your dealer for further details. NOTE GAMMA is fixed to 2.2 in the sRGB picture mode. When PROGRAMMABLE has been selected, the setting for color temperature is fixed at 10,000 K (NATIVE).		
AUTO BRIGHTNESS*4	AUTO BRIGHTNESS	OFF	AUTO BRIGHTNESS is turned off.
		LOCAL	The AUTO BRIGHTNESS function is enabled and you can adjust [CONTROL] and subsequent items individually.
		REMOTE	The AUTO BRIGHTNESS function is enabled. In addition, the monitor enters the intercommunication mode where multiple monitors are controlled collectively. (See page 45)
		AUTO	The settings of AUTO BRIGHTNESS are adjusted automatically. NOTE When you select AUTO, you cannot adjust any other items than [CONTROL] individually.
	CONTROL	PRIMARY	Select this setting to configure the monitor as Master when controlling multiple monitors collectively.
SECONDARY		Select this setting to use the monitor alone or to configure the monitor as Slave when controlling multiple monitors collectively.	

PICTURE

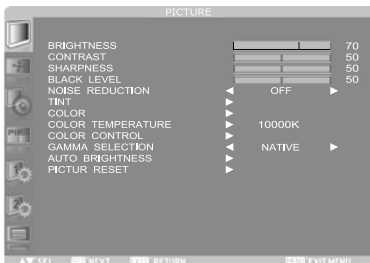

Adjustment Item	Problem / Option		Button to Press	
AUTO BRIGHTNESS* ⁴	LIGHT FROM BACK* ⁵	When a light source such as a light and a window is behind the monitor, the rear sensor takes precedence.		
		YES	Select this setting when there is a light source such lighting equipment and a window behind the monitor.	
		NO	Select this setting when there is no light source such lighting equipment and a window behind the monitor.	
	BACK WALL * ⁵	Select the following settings according to the distance between the rear of the monitor and the wall or window.		
		FAR	The distance is 5 meters or longer.	
		NEAR	The distance is 5 meters or shorter.	
	FRONT SENSOR	ON	Select ON for normal use.	
		OFF	Select this setting when the sensor on the front panel is shielded.	
	REAR SENSOR	ON	Select ON for normal use.	
		OFF	Select this setting when the sensor on the rear panel is shielded.	
	SATURATION	ON	The image saturation is adjusted depending on the ambient light.	
		OFF	SATURATION is turned off.	
VIDEO DETECT	ON	The screen brightness varies depending on what are displayed on the screen to reduce power consumption of the monitor.		
	OFF	VIDEO DETECT is turned off.		
PICTURE RESET	NO		Return to Menu.	
	YES		Reset all the PICTURE settings to the factory defaults.	

*1 Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright. BRIGHTNESS is disabled when BRIGHTNESS of SCREEN SAVER in the CONFIGURATION1 menu is active.


*2 This adjustment doesn't work in the sRGB picture mode.

*3 This function doesn't work on D-SUB input.

*4 This adjustment doesn't work in the sRGB or CINEMA picture mode.


*5 This function is enabled only when REAR SENSOR is ON.

SCREEN

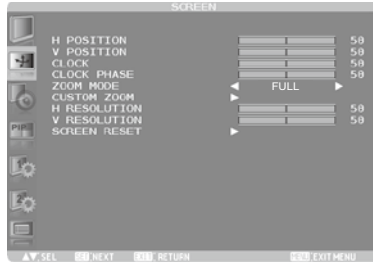

Adjustment Item	Problem / Option		Button to Press	
H POSITION		Too far to the left	+	
		Too far to the right	-	
V POSITION		Too low	+	
		Too high	-	
CLOCK*		Too narrow	+	
		Too wide	-	
CLOCK PHASE*	To correct flickering text or lines		+ -	
ZOOM MODE	FULL	The image is stretched to full the screen regardless of its aspect ratio.		
	NORMAL	The image is stretched vertically to the full height of the screen while keeping the aspect ratio.		
	DYNAMIC	The image is stretched to full the screen with different magnifications at the screen center and the screen edges.		
	CUSTOM	Stretch the image horizontally and vertically as you desire using the CUSTOM ZOOM setting.		
	REAL	The image is displayed without being stretched or reduced.		
NOTE	The DYNAMIC mode displays images having the 16:9 aspect ratio, such as those with 1920 x 1080 resolution, in the same way as in the FULL mode.			
CUSTOM ZOOM	CUSTOM ZOOM becomes selectable when you set ZOOM MODE to CUSTOM.			
	ZOOM	Expand the horizontal and vertical sizes simultaneously.		
	H ZOOM	Expand the horizontal size only.		
	V ZOOM	Expand the vertical size only.		
	H POSITION		Too far to the left	+
			Too far to the right	-
V POSITION		Too low	+	
		Too high	-	
H RESOLUTION*	Use this setting when AUTO SETUP and AUTO ADJUST cannot obtain the horizontal resolution of the input signal.		+ -	

SCREEN

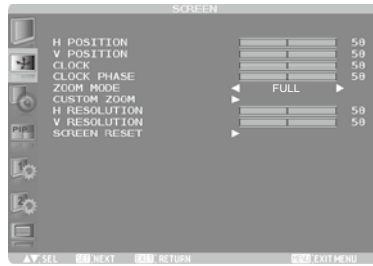

Adjustment Item	Problem / Option	Button to Press
V RESOLUTION*	Use this setting when AUTO SETUP and AUTO ADJUST cannot obtain the vertical resolution of the input signal.	+ -
SCREEN RESET	NO	Return to Menu.
	YES	Reset all the SCREEN settings to the factory defaults.


* Only D-SUB input.

AUDIO



Adjustment Item	Problem / Option	Button to Press
BALANCE	Left side speaker louder	+
	Right side speaker louder	-
TREBLE	Too weak	+
	Too strong	-
BASS	Too weak	+
	Too strong	-
SPEAKER	INTERNAL	Select the Internal Speaker.
	EXTERNAL	Select the External Speaker.
AUDIO RESET	NO	Return to Menu.
	YES	Reset all the SOUND settings to the factory defaults.

PIP*

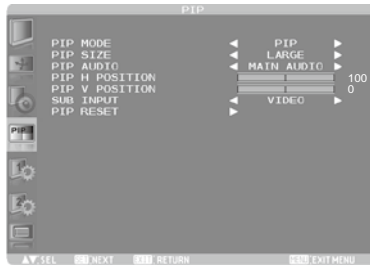

Adjustment Item	Problem / Option		Button to Press
PIP MODE	PIP	POP	SBS ASPECT
	SBS FULL	OFF	
PIP SIZE	SMALL	Reduce the size of the Sub screen.	
	MIDDLE	Middle the size of the Sub screen.	
	LARGE	Increase the size of the Sub screen.	
PIP AUDIO	MAIN AUDIO	Select the main audio.	
	PIP AUDIO	Select the PIP audio.	
PIP H POSITION	Move the horizontal position of the Sub screen.		+ -
PIP V POSITION	Move the vertical position of the Sub screen.		+ -
SUB INPUT	Select from the input signals HDMI, DVI-D, D-SUB, YPbPr, S-VIDEO and VIDEO of the Sub screen.		
PIP RESET	NO	Return to Menu.	
	YES	Reset all the PIP settings to the factory defaults.	


* PIP = Picture in Picture POP = Picture on Picture SBS = Side by Side
 With this function, you can display two different picture.
 PIP, POP support details, See page 56 "PIP, POP Support Screen Table".

CONFIGURATION1



Adjustment Item	Problem / Option		Button to Press	
AUTO SETUP*1	The screen size, horizontal/vertical position, clock, clock phase, and input signal level are automatically adjusted.			
AUTO ADJUST*1	ON	The horizontal position, vertical position, and clock phase are automatically adjusted at the time of the timing switching.		
	OFF	Return to Menu.		
POWER SAVE	When the power saver in the OSD menu is turned ON, the power management function works.			
	RGB	When the sync signal of computer input (HDMI1, HDMI2, DVI-D, D-SUB, or DISPLAYPORT) is terminated, the monitor will be in the sleep mode in several seconds.		
	VIDEO	When the sync signal of video input (YPbPr, S-VIDEO, or VIDEO) is terminated, the monitor will be in the sleep mode in approximately 10 minutes.		
LANGUAGE	English	English	Nederlands	Dutch
	Français	French	Polski	Polish
	Deutsch	German	Русский	Russian
SCREEN SAVER	GAMMA	ON	The Gamma mode where image persistence is difficult to occur is used.	
		OFF	GAMMA is turned off.	
	COOLING FAN	AUTO	The built-in fan automatically starts running according to the operating temperature.	
		ON	The cooling fan always runs.	
	BRIGHTNESS	ON	The brightness decreases.	
		OFF	BRIGHTNESS is turned off.	

CONFIGURATION1

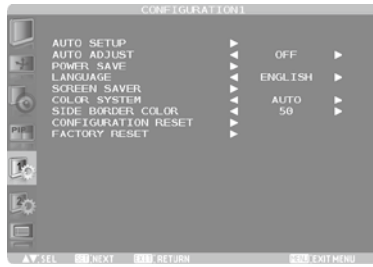

Adjustment Item	Problem / Option		Button to Press
SCREEN SAVER	ON		The screen slightly moves horizontally and vertically at regular intervals to reduce the effect of the image persistence. 10-900s
	OFF		MOTION is turned off.
	<p data-bbox="407 632 510 655">MOTION*2</p> <p data-bbox="555 507 1014 679">When you select a time period in the MOTION setting, the monitor enlarges the image and moves it horizontally and vertically. The portions of the image out of the display area aren't visible. To make the entire image visible all the time, arrange it to fit within 90% of the screen area at the center.</p> <div data-bbox="566 687 994 911"> <p data-bbox="743 775 967 807">The portion (shaded part) outside the display area isn't displayed.</p> <p data-bbox="835 823 891 839">Motion</p> <p data-bbox="678 855 712 871">90%</p> </div>		
COLOR SYSTEM*3	AUTO		NTSC, PAL, SECAM, PAL-60 or 4.43 NTSC is automatically selected.
	NTSC		Select the NTSC.
	PAL		Select the PAL.
	SECAM		Select the SECAM.
	4.43NTSC		Select the 4.43NTSC.
	PAL-60		Select the PAL-60.
SIDE BORDER COLOR	Adjust the brightness of the area where no images are displayed when a 4:3 image is displayed in the NORMAL mode in the ZOOM MODE or the POP or other modes in the PIP MODE.		
	OFF		SIDE BORDER COLOR is turned off. (Black)
	50		Brighten the screen brightness. (Gray)
	100		Brighter than "50" the brightness of the screen. (White)
CONFIGURATION RESET	NO		Return to Menu.
	YES		Reset all the CONFIGURATION1 and CONFIGURATION2 settings to the factory defaults.
	<p data-bbox="418 1458 486 1490">NOTE</p> <p data-bbox="497 1458 967 1509">The LANGUAGE, MONITOR ID, SCHEDULE, and DATE AND TIME settings aren't reset.</p>		

CONFIGURATION1



Adjustment Item	Problem / Option		Button to Press
FACTORY RESET	NO	Return to Menu.	
	YES	Reset all the PICTURE, SCREEN, AUDIO, CONFIGURATION1, CONFIGURATION2, and ADVANCED OPTION settings to the factory defaults.	
	<div style="background-color: #0056b3; color: white; padding: 2px;">NOTE</div> The LANGUAGE, CONTROL TIME OUT, MONITOR ID, SCHEDULE, and DATE AND TIME aren't reset.		


*1 Only D-SUB input.

*2 MOTION is disabled when TILING in the ADVANCED OPTION menu is active.

*3 Only S-VIDEO and VIDEO inputs.

CONFIGURATION2










Adjustment Item	Problem / Option		Button to Press
SERIAL CONTROL	RS-232C	Select the RS-232C.	
	LAN	Select the LAN.	
LAN SETTING*	DHCP CLIENT	ON	Select whether to use DHCP client or not.
		OFF	DHCP CLIENT is turned off.
	IP ADDRESS	When DHCP CLIENT is OFF, set the IP address of the monitor. When DHCP CLIENT is ON, you can check the value set by the DHCP server.	
	SUBNET MASK	When DHCP CLIENT is OFF, set the gateway mask. Set it to 255.255.255.0 for normal use. When DHCP CLIENT is ON, you can check the value set by the DHCP server.	
	DEFAULT GATEWAY	When DHCP CLIENT is OFF, set the IP address of the gateway router to externally connect the local area including the monitor. When DHCP CLIENT is ON, you can check the value set by the DHCP server.	
	PORT	The port number (60822) of the monitor is displayed.	
	RESET	LAN settings are reset.	
CONTROLLER SETTING*	CONTROLLER IP	Set the IP address of the control processor.	
	PORT NUMBER	Set the port number used for communication.	
	IP ID	Set the IP identification number.	
CONTROL TIME OUT	When using remote control, the timeout for transmission intervals among codes within the control command can be set. 10ms / 2s / 30s		
MONITOR ID	Set ID to the Monitor. 1-26		
OSD TURN OFF	The OSD control menu will stay on as long as it is used. 5 - 120 seconds		 + -


* This function is enabled only when you selected "LAN " in SERIAL CONTROL.

CONFIGURATION2




Adjustment Item	Problem / Option	Button to Press
OSD H POSITION	OSD is too left OSD is too right	+ -
OSD V POSITION	OSD is too low OSD is too high	+ -
OSD ROTATION	<p>OFF</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  H MIRROR  Horizontally rotated </div> <div style="text-align: center;">  V MIRROR  Vertically rotated </div> </div> <p>90L</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  90 degree rotation </div> <div style="text-align: center;">  180 180 degree rotation </div> <div style="text-align: center;">  90R 270 degree rotation </div> </div>	
INFORMATION OSD	<p>Enable and disable the information OSD display. OFF, 3 - 10 seconds</p> <p>NOTE The information OSD display shows a message when the input source is switched.</p>	
OFF TIMER	<p>Select the OFF TIMER mode. OFF, 1 - 24 hours</p> <p>NOTE When OFF TIMER is enabled, the SCHEDULE settings (see page 44) will be disabled.</p>	
SCHEDULE	You can program the LCD display operation schedules. (See page 44)	
DATE AND TIME	<p>Adjust the current date and time for the internal clock. You must set this item when using SCHEDULE. After completing the setting, be sure to press the SET button (Remote Control) or INPUT button (Back Controller). YEAR / MONTH / DAY / HOUR / MINUTE / DAYLIGHT SAVING TIME</p>	
MONITOR INFORMATION	The model name and the serial number of your monitor are displayed. The MAC address of LAN is displayed.	

ADVANCED OPTION

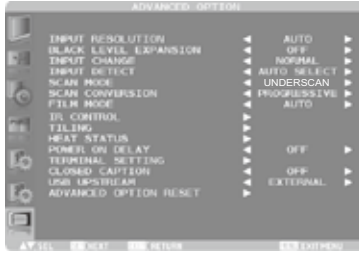


Adjustment Item	Problem / Option		Button to Press
INPUT RESOLUTION* ¹	If the monitor fails to recognize the input signal resolution correctly, you can select a proper resolution manually. Only when a signal having a resolution close to any of the following values from three groups, the values in the most appropriate group are selectable.		
	Group 1	AUTO, 1024 x 768, 1280 x 768, 1360 x 768, 1366 x 768	
	Group 2	AUTO, 1400 x 1050, 1680 x 1050	
	Group 3	AUTO, 1600 x 1200, 1920 x 1200	
BLACK LEVEL EXPANSION* ²	OFF	BLACK LEVEL EXPANSION is turned off.	
	SOFT	Lower the black level.	
	HARD	Lower than the black level "SOFT".	
INPUT CHANGE	NORMAL	Normal switching time.	
	QUICK	Quick switching time.	
	NOTE When you select QUICK, slight noise may appear.		
INPUT DETECT	OFF	INPUT DETECT is turned off.	
	AUTO SELECT	The target video inputs are DVI-D and D-SUB. When the currently selected input signal is lost, this function checks whether the signal is present at the other input. When present, the other input is automatically selected. If no signal is present at both inputs for five seconds, the monitor enters the sleep mode. The priority of the input signal is as follows: DVI-D > D-SUB NOTE You cannot select other inputs than DVI-D and D-SUB.	
	VIDEO SELECT	The target video inputs are HDMI1, S-VIDEO, VIDEO, and D-SUB. When the HDMI1, S-VIDEO, or VIDEO input is detected, the detected input is automatically selected. When the video signal being displayed is lost, the D-SUB input is automatically selected. The priority of the input signal is as follows: HDMI1 > VIDEO > S-VIDEO NOTE You cannot select HDMI2, DVI-D and DISPLAYPORT.	
SCAN MODE* ³	Select the image display area.		
	OVERSCAN	About 95% of the input image is displayed.	
	UNDERSCAN	Almost 100% of the input image is displayed.	

ADVANCED OPTION

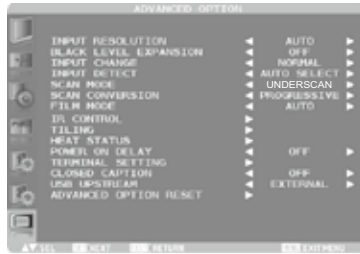


Adjustment Item	Problem / Option		Button to Press	
SCAN CONVERSION*3,4	PROGRESSIVE	Interlace signals are converted into progressive signals. Select this setting for normal cases.		
	INTERLACE	Interlace signals are displayed without being converted. Though this setting is suitable for motion images, still images aren't displayed properly.		
FILM MODE*3,4	OFF	FILM MODE is turned off.		
	AUTO	Images of 24 frames per second are detected, subjected to interpolation, and then displayed.		
	NOTE	When FILM MODE is AUTO, set SCAN CONVERSION to PROGRESSIVE.		
IR CONTROL	Lock the remote control.			
	NORMAL	All the remote control operations are enabled.		
	PRIMARY	The first monitors of those multiconnected via RS-232C is designated as PRIMARY.		
	SECONDARY	The monitors other than the first one multi-connected via RS-232C are designated as SECONDARY.		
	LOCK	All the remote control operations are disabled.		
	NOTE	When you hold down the DISPLAY button on the remote control for at least 5 seconds, the NORMAL mode is activated.		
TILING	TILING is a function to divide or enlarge images and display them across multiple screens. You can divide an input video up to five pieces horizontally and vertically and display them on a single large screen comprised of up to 25 (5 x 5) monitors tiled together.			
	H MONITORS	Sets the number of displays used in the horizontal position.		
	V MONITORS	Sets the number of displays used in the vertical position.		
	POSITION	Select the area you want to enlarge.		
	FRAME COMP.	ON	When displaying an image across multiple monitors, you can select the mode to compensate for the bezel widths for smooth and natural display.	
		OFF	FRAME COMP. is turned off.	
	ENABLE	ON	The image in the selected area is enlarged on the screen.	
OFF		ENABLE is turned off.		

ADVANCED OPTION

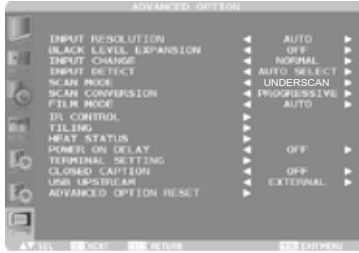

Adjustment Item	Problem / Option		Button to Press
HEAT STATUS	<p>The statuses of the cooling fan, brightness, and internal temperature are displayed.</p> <p>NOTE The cooling fan starts running according to the operating temperature or when COOLING FAN is ON in the SCREEN SAVER menu. When the operating temperature substantially exceeds the operation guaranteed range, the message "TEMPERATURE WARNING" is displayed on the screen.</p>		
POWER ON DELAY	<p>Adjust the delayed time until the power-on mode is activated at the time of recovery from the sleep mode or power-on. OFF, 2 - 50 seconds</p>		
TERMINAL SETTING	HDMI SIGNAL 1/2	FULL	Select FULL when displaying the signal that uses all 256 levels (from level 0 to 255). This mode is used primarily when input comes from a computer.
		LIMITED	Select LIMITED when displaying the signal that uses 16 to 235 levels of 256 levels for each of R, G, and B. This mode is used primarily when input comes from a video device.
	HDMI MODE 1/2	HDMI-HD	Select HDMI-HD when the source device is a video device.
		HDMI-PC	Select HDMI-PC when the source device is a PC.
	DVI MODE	DVI-HD	Select DVI-HD when the source device is a video device.
		DVI-PC	Select DVI-PC when the source device is a PC.
CLOSED CAPTION	OFF	CLOSED CAPTION is turned off.	
	CC1	Captions are displayed in sync with the primary audio.	
	CC2	Information (related to the primary audio) is displayed without sync.	
	CC3	Captions are displayed in sync with the secondary audio.	
	CC4	Information (related to the secondary audio) is displayed without sync.	
	TT1/TT2/TT3/TT4	Four types of information not related to the displayed images are displayed. (For example, news and weather forecast.)	
		<p>NOTE Check with each supplier of your video software and external video devices in advance whether they are compliant with EIA-608-A. If their video signals are not compliant with it, images may not be displayed correctly.</p>	

ADVANCED OPTION

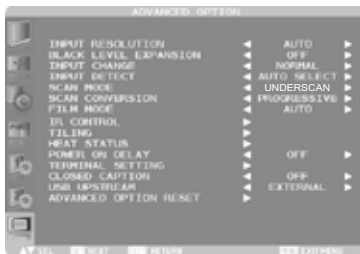

Adjustment Item	Problem / Option		Button to Press
USB UPSTREAM	EXTERNAL	The 1 upstream ports and distribute the signal to 2 downstream ports.	
	NOTE	This function can not change.	
ADVANCED OPTION RESET	NO	Return to Menu.	
	YES	Reset all the ADVANCED OPTION RESET settings to the factory defaults.	
	NOTE	The HDMI MODE, are DVI MODE aren't reset.	


*1 Only D-SUB input.

*2 Only HDMI, DVI-D, YPbPr, DISPLAYPORT, S-VIDEO and VIDEO inputs.

*3 This adjustment doesn't work when D-SUB input.

*4 It works on interlace signals only.

[HOW TO SET UP SCHEDULE]

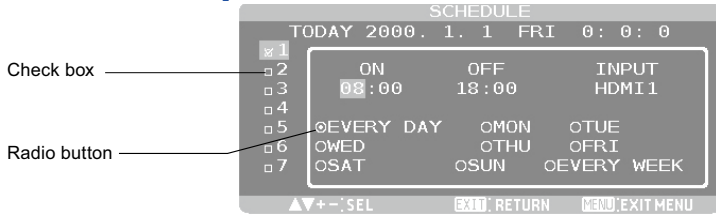

Program number selection

When the cursor is in any of the check boxes showing the program numbers 1 to 7 on the left side of the screen, press the UP (▲) or DOWN (▼) button to move the cursor up or down to select the program number you want to set.

To enable the selected program number, press the SET button to place a checkmark in the check box. To disable it, clear the checkmark.

Schedule setting of each program

When the cursor is in any of the check boxes, pressing the PLUS (+) button moves the cursor into the white frame on the right.

When the cursor is at any of the items within the white frame, pressing the PLUS (+) button moves the cursor to the right, and MINUS (-) button to the left.

You can set the power-on/off time and video input by pressing the UP (▲) or DOWN (▼) button. In addition, you can select or deselect the radio buttons by pressing the SET button.

ON	Set the time when the power is turned on. If you don't want to set the power-on time, enter "--."
OFF	Set the time when the power is turned off. If you don't want to set to the power-off time, enter "--."
INPUT	Displays the video input selected when the power is turned on. If you want to select the video input that was selected before the power is turned on, enter "--." When you set the ON time and the video input, you can switch the video input alone.
EVERY DAY	Select this option to execute the schedule every day. When you select EVERY DAY, you cannot select any days of the week and EVERY WEEK.
MON - SUN	Select the days of the week on which you want to execute the schedule. Unless you select EVERY WEEK, too, the selection of the days of the week is cleared after the schedule is executed one time.
EVERY WEEK	Select this option to execute the schedule on the selected days of the week, every week.

Schedule confirmation

To confirm the schedule, press the MENU button (remote control) or the EXIT button (back button) to exit the SCHEDULE menu of the OSD screen function.

If you turn off the power before exiting the SCHEDULE menu, the schedule settings may be canceled.


- Before making the schedule settings, be sure to check the current date and time using "DATE AND TIME".
- When you close the SCHEDULE screen, the settings are saved.
- When two or more schedules are enabled, they are executed in descending order of the program number, and the power is turned off upon completion of the last executed schedule.
- When there are two or more schedules having the same power-on/off time, the one having the largest program number is executed.
- You cannot set the power-on time and the power-off time to the same time.
- When OFF TIME is ON, the schedule settings are ignored.

[SUPPLEMENTAL INFORMATION OF THE AUTO BRIGHTNESS FUNCTION]

To control multiple monitors collectively

In such a case where the tiling function is used, you can control the auto brightness function by sharing the detection result of the brightness sensor of a certain monitor among the connected monitors.

1. Multi-connect the monitors using RS-232C cables (commercially available) as shown by the example below.

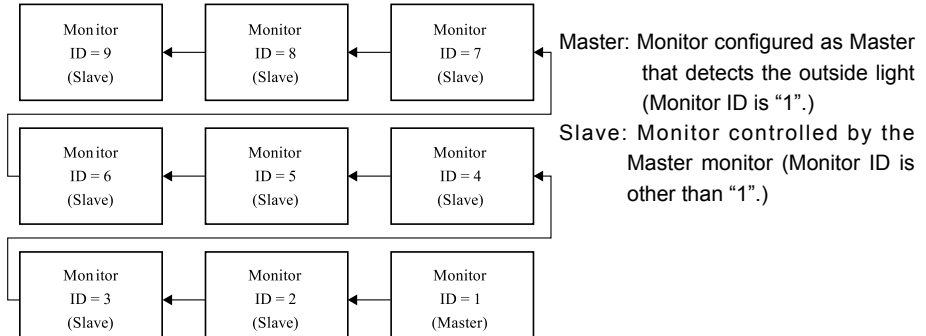

2. Assign a monitor ID to each multi-connected monitors using MONITOR ID. (See page 38.) Monitor ID is selectable from 1 to 26. The monitor ID of the Master monitor should be "1" and those of the Slave monitors should be other than "1". You are recommended to assign IDs to the monitors consecutively from 1, 2, 3, and on.
3. Set AUTO BRIGHTNESS on the OSD screen (PICTURE) as follows.

	AUTO BRIGHTNESS	CONTROL
Master monitor	LOCAL	PRIMARY
Slave monitors	REMOTE	SECONDARY

To use a computer to control the monitors

When using a computer to control the monitors, you must prepare an application software program for control by yourself. Brightness of all the monitors can be controlled centrally using a computer, if the customer create a control application to remotely read the value from two brightness sensors of any monitor and distribute it to all monitors.

1. Connect the RS-232C IN connector of the Master monitor shown above and the RS-232C connector of the computer using an RS-232C cable. The communication control function via LAN isn't supported on the monitor alone, however, it is available when the monitor is used with the computer.
2. Assign a monitor ID to each multi-connected monitors using MONITOR ID. (See page 38.) Monitor ID is selectable from 1 to 26.
3. Set AUTO BRIGHTNESS on the OSD screen (PICTURE) as follows.


	AUTO BRIGHTNESS	CONTROL
Master monitor	REMOTE	SECONDARY
Slave monitors	REMOTE	SECONDARY

4. A control application made by the customer reads the value from two brightness sensors of any monitor and distributes it to all monitors. For the specifications of the communication commands, contact your dealer.

[REMOTE CONTROL NUMBERING FUNCTION]

By connecting multiple monitors using RS-232C cables, you can control any one monitor or all the monitors by one remote controller.

1. Assign arbitrary ID number to each of multi-connected monitors using MONITOR ID. ID numbers 1 to 26 are selectable. It is recommended to assign sequential ID numbers from 1 and up.
2. The remote control mode of the first monitor is set to PRIMARY and those of the other monitors are set to SECONDARY.
3. When you direct the remote controller at the remote control signal sensor of the PRIMARY monitor and press the DISPLAY button on the remote controller, the ID selection OSD appears at the upper left of the screen.

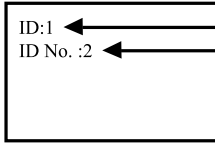

4. Direct the remote controller at the remote control signal sensor of the PRIMARY monitor. OSD appears on the monitor having the ID number you selected.

When the ID selection OSD is being displayed on the PRIMARY monitor, press the DISPLAY button on the remote controller again to cancel the ID selection OSD and then control the monitor you selected. If you set the remote control mode wrongly and remote control operation becomes unavailable, press any button on the control panel of the monitor to display the OSD screen and change the remote control mode using ADVANCED OPTION. By pressing and holding down the DISPLAY button on the remote control for 5 seconds or longer, the remote control mode is initialized to NORMAL.

SCREEN ADJUSTMENTS

Adjust the image by following the procedure below to get the desired picture when selecting Analog input.

- The screen adjustments described in this manual are designed to set image position and minimize flicker or blur for the particular computer in use.
- The monitor is designed to provide the best performance at resolution of 1920 × 1080, but can not provide the best at resolutions of less than 1920 × 1080 because the picture is automatically stretched to fit the full screen. It is recommended to operate at resolution of 1920 × 1080 in normal use.
- Displayed text or lines will be blurred or irregular in thickness when the picture is stretched due to the screen enlargement process.
- It is preferable to adjust the image position and frequency with the monitor controls, rather than the computer software or utilities.
- Perform adjustments after a warm-up period of at least thirty minutes.
- Additional adjustments may be required after the Auto Adjust depending on the resolution or signal timing.
- The Auto Adjust may not work correctly when displaying the picture other than the screen adjustment pattern. In this case, manual adjustments are required.

There are two ways to adjust the screen. One way is automatic adjustment for Position, Clock and Phase. The other way is performing each adjustment manually.

Perform the Auto Adjust first when the monitor is connected to a new computer, or resolution is changed. If the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Adjust, manual adjustments are required. Both adjustments should be made by using the screen adjustment pattern (Test.bmp) obtained via the Iiyama web site (<http://www.iiyama.com>).

Adjust the image by following the procedure below to get the desired picture.


This manual explains adjustment under Windows OS.

- ① **Display the picture at the optimum resolution.**
- ② **Enter the Test.bmp (screen adjustment pattern) to wallpaper.**


NOTE

- Consult the appropriate documentation for doing this.
- Test.bmp is made at resolution of 1280 × 1024. Set the display position to center in the wallpaper setting dialogue box. If you use Microsoft® PLUS! 95/98 cancel the setting of "Stretch desktop wallpaper to fit the screen".


[Adjustment pattern]

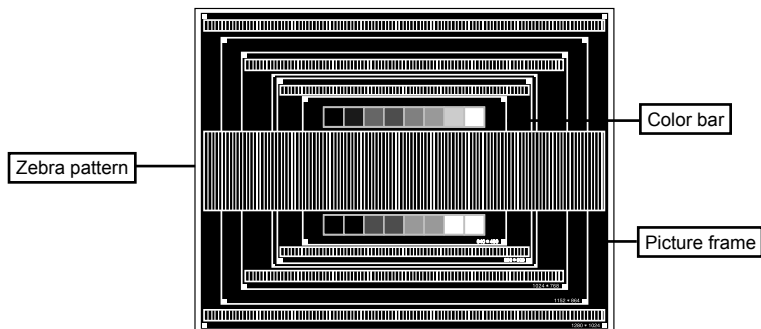


- ③ Adjust the Auto Adjustment.
- ④ Adjust the image manually by following procedure below when the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Adjust.
- ⑤ Adjust the V-Position so that the top and bottom of the picture frame will fit to the display area.

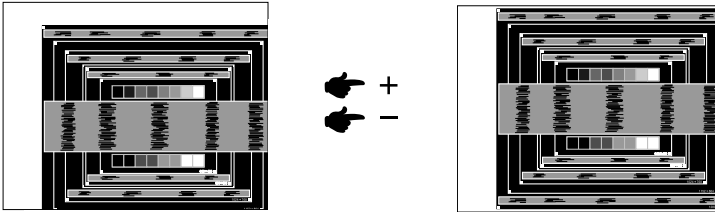

- ⑥ 1) Adjust the H-Position so that the left side of the picture frame will move to the left edge of the display area.

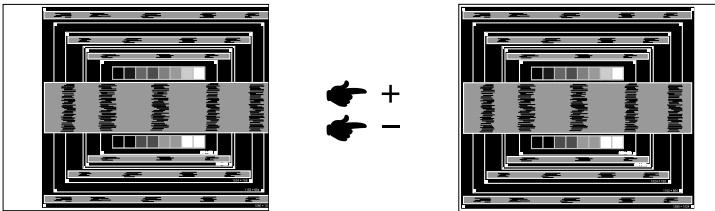


- 2) Stretch the right side of the picture frame to the right edge of the display area by adjusting the Clock.

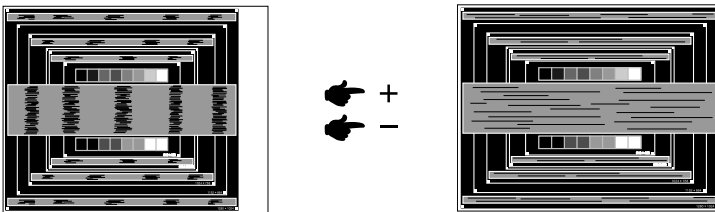**NOTE**

- When the left side of the picture frame moves apart from the left edge of the display area during the Clock adjustment, adjust steps 1) and 2).
- Another way to make the Clock adjustment is to correct the vertical wavy lines in the zebra pattern.
- The picture may flicker during the Clock, H/V-Position adjustment.
- In case the picture frame is bigger or smaller than the data display area after the Clock adjustment, repeat steps from ③.

⑦ Adjust the Phase to correct horizontal wavy noise, flicker or blur in the zebra pattern.

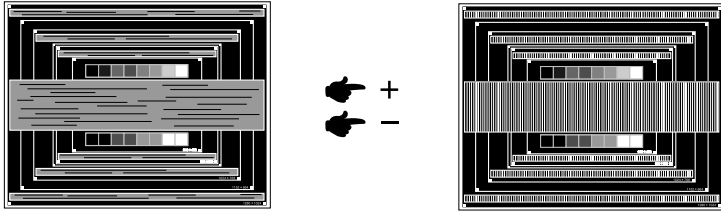

NOTE

- In case the strong flicker or blurs remain on a part of the screen, repeat steps ⑥ and ⑦ because the Clock may not be adjusted correctly. If the flicker or blurs still remain, set the refresh rate of computer to low (60Hz) and repeat steps from ③ again.
- Adjust the H-Position after the Phase adjustment if the horizontal position moves during the adjustment.

⑧ Adjust the Brightness and Color to get the desired picture after you complete the Clock and Phase adjustments.

Put back your favorite wallpaper.


POWER MANAGEMENT FEATURE

The power management feature of this product complies with power saving requirement of ENERGY STAR® and VESA DPMS. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

To use the feature, the monitor needs to be connected to a VESA DPMS compliant computer. There is a power management step the monitor takes as described below. The power management function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

■ Power Management Mode

When the H-sync signal / V-sync signal / H and V sync signals from the computer are off, the monitor enters into Power Management Mode which reduces the power consumption to less than 1W. The screen becomes dark. From Power Management Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

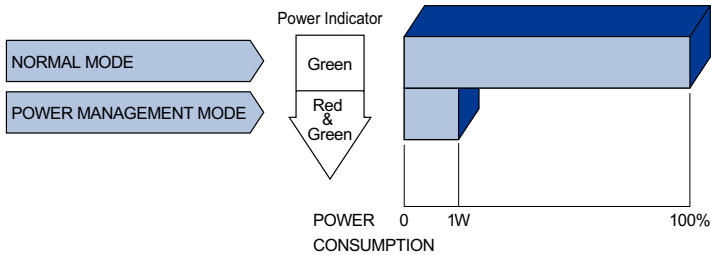

NOTE

- Even when using the power management mode, the monitor consumes electricity. Turn off the Power Switch whenever the monitor is not in use, during the night and weekends, to avoid unnecessary power consumption.
- It is possible that the video signal from the computer may be on while the H or V sync signal is missing. In this instance, the POWER MANAGEMENT feature may not work properly.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Problem	Check
① The picture does not appear.	<ul style="list-style-type: none"><input type="checkbox"/> The Power Cable is firmly seated in the socket.<input type="checkbox"/> The Power Switch is turned ON.<input type="checkbox"/> The AC socket is live. Please check with another piece of equipment.<input type="checkbox"/> If the blank screen saver is in active mode, touch the keyboard or the mouse.<input type="checkbox"/> Increase the Contrast and/or Brightness.<input type="checkbox"/> The computer is ON.<input type="checkbox"/> The Signal Cable is properly connected.<input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.<input type="checkbox"/> If the monitor is in power management mode, touch the keyboard or the mouse.
② The screen is not synchronized.	<ul style="list-style-type: none"><input type="checkbox"/> The Signal Cable is properly connected.<input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.<input type="checkbox"/> The video output level of the computer is within the specification of the monitor.
③ The screen position is not in the center.	<ul style="list-style-type: none"><input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
④ The screen is too bright or too dark.	<ul style="list-style-type: none"><input type="checkbox"/> The video output level of the computer is within the specification of the monitor.
⑤ The screen is shaking.	<ul style="list-style-type: none"><input type="checkbox"/> The power voltage is within the specification of the monitor.<input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
⑥ No sound.	<ul style="list-style-type: none"><input type="checkbox"/> The audio equipment (computer etc.) is ON.<input type="checkbox"/> The Audio Cable is properly connected.<input type="checkbox"/> The Volume is turned up.<input type="checkbox"/> The Mute is OFF.<input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.
⑦ The sound is too loud or too quiet.	<ul style="list-style-type: none"><input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.
⑧ A strange noise is heard.	<ul style="list-style-type: none"><input type="checkbox"/> The Audio Cable is properly connected.

- ⑨ Remote control is not available
- Check the remote control's batteries status.
 - Check if the batteries are inserted correctly.
 - Check if the remote control is pointing at the monitor's remote sensor.
- ⑩ "SCHEDULE"/"OFF TIMER" function is not working properly
- The "SCHEDULE" function will be disabled when the "OFF TIMER" is set.
 - If the "OFF TIMER" function is enabled and the power to the LCD display is turned off if the power supply is interrupted unexpectedly, then the "OFF TIMER" will be reset.

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor.
Please visit our web site: www.iiyama.com/recycle for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.



SPECIFICATIONS

Size Category		55"
LCD Panel	Panel technology	VA
	Size	Diagonal: 54.6" (138.8cm)
	Pixel pitch	0.630mm H × 0.630mm V
	Brightness	450cd/m ² (Typical)
	Contrast ratio	4000 : 1 (Typical)
	Viewable angle	Horizontal : 178 degrees, Vertical: 178 degrees (Typical)
	Response time	6.5ms (Gray to Gray)
Display Colors		Approx. 1.06B
Sync Frequency		Analog: Horizontal: 15.625/15.734, 31.5-91.1kHz, Vertical: 50/58-85Hz Digital: Horizontal: 31.5-91.1kHz, Vertical: 50/58-85Hz
Maximum Resolution		1920 × 1080, 2.1 MegaPixels
Input Connector		D-Sub mini 15 pin, DVI-D 24 pin, HDMIx2, DisplayPort
Input Video Connector		BNC jack, S-Video
Input Audio Connector		mini jack
LAN		RJ45
Serial Port		RS-232C In/Out
Plug & Play		VESA DDC2B™
Input Sync Signal		Separate sync: TTL, Positive or Negative
Input Video Signal		Analog: 0.7Vp-p (Standard), 75Ω, Positive Digital: DVI (Digital Visual Interface Standard Rev.1.0) compliance Digital: HDMI, DisplayPort
Input Audio Signal		2.0Vrms maximum
Output Connector		DVI-D 24 pin
Output Video Connector		BNC jack
Output Audio Connector		mini jack
USB Standard		USB2.0
Number of USB Ports		1 Upstream : Series B
Connector shape		2 Downstream : Series A
Speakers		Internal: 10W×2 (Stereo speakers), External speaker jack: 10W×2
Maximum Screen Size		1209.6mm W × 680.4mm H / 47.6" W × 26.8" H
Power Source		100-240V~, 50 - 60Hz, 1.8A - 0.8A
Power Consumption*		133W typical, Power management mode: 1W maximum
Dimensions / Net Weight		1247.0 × 718.0 × 66.5mm / 49.1 × 28.3 × 2.6" (W×H×D) 28.5kg / 62.8lbs
Environmental Considerations		Operating: Temperature 0 to 35°C / 32 to 95°F Humidity 20 to 80% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 10 to 90% (No condensation)
Approvals		CB, CE, EAC, TÜV-Bauart, ENERGY STAR®

NOTE * Audio equipment are not connected.

DIMENSIONS

ENGLISH

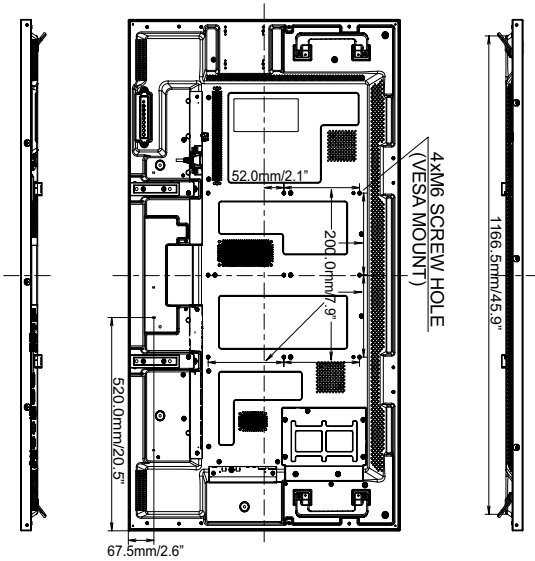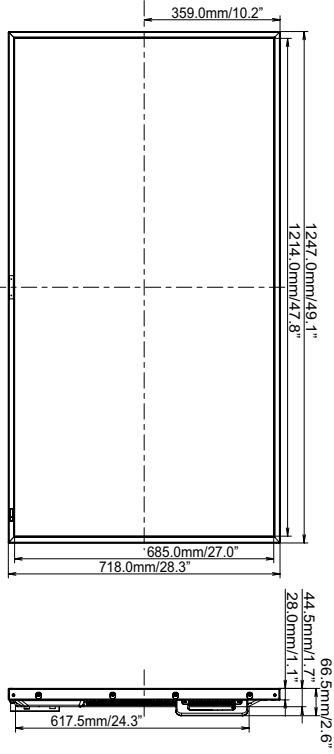

COMPLIANT TIMING

Timing		fH(kHz)	fV(Hz)	Dot clock (MHz)	VGA	DVI	DisplayPort	HDMI	YPbPr	AV	S-Video
VESA	VGA 640x480	31.470	59.940	25.180	○	○	○	○			
	SVGA 800x600	37.880	60.320	40.000	○	○	○	○			
	XGA 1024x768	48.360	60.000	65.000	○	○	○	○			
	1280x720	45.000	60.000	74.250	○	○	○	○			
	1280x768	47.780	59.870	79.500	○	○	○	○			
	WXGA 1280x800	49.702	59.810	83.500	○	○	○	○			
	SXGA 1280x1024	63.980	60.020	108.000	○	○	○	○			
	1366x768	47.700	60.000	85.380	○	○	○	○			
	1400x1050	65.320	59.980	121.750	○	○	○	○			
	1440x900	55.935	59.887	106.500	○	○	○	○			
	1680x1050	64.674	59.883	119.000	○	○	○	○			
1920x1080(Recommend)	67.158	59.963	148.500	○	○	○	○				
IBM	720x400	31.470	70.080	28.320	○	○	○	○			
MAC	1920x1080	67.625	60.110	160.000			○				
SD	NTSC	15.734	59.940	13.500					○	○	○
	4.43NTSC	15.734	59.940	13.500					○	○	○
	PAL	15.625	50.000	13.500					○	○	○
	PAL-60	15.734	59.940	13.500					○	○	○
	SECAM	15.625	50.000	13.500					○	○	○
	480i	60Hz	15.734	59.940	13.500			○	○	○	
	576i	50Hz	15.625	50.000	13.500			○	○	○	
	480p	60Hz	31.469	59.940	27.000		○	○	○	○	
HD	720p	50Hz	37.500	50.000	74.250		○	○	○	○	
		60Hz	44.955	59.940	74.250		○	○	○	○	
	1080i	50Hz	28.125	50.000	74.250		○	○	○	○	
		60Hz	33.716	59.940	74.250		○	○	○	○	
	1080p	50Hz	56.250	50.000	148.500		○	○	○	○	
		60Hz	67.432	59.940	148.500		○	○	○	○	

* ○ means supported the timing.

PIP SUPPORT SCREEN TABLE

The following table shows the combinations of signal inputs with which the “PIP” and “POP” modes function. However, these modes do not function when the screen size is “CUSTOM” or “REAL”.

Sub Main	HDMI1	HDMI2	DVI-D	D-SUB		YPbPr		VIDEO
HDMI1	—	—	—	—	—	—	○	○
HDMI2	—	—	—	—	—	—	○	○
DVI-D	—	—	—	—	—	—	○	○
D-SUB	—	—	—	—	—	—	○	○